


OPERATING MANUAL

ELECTRONIC PLASTOMETER

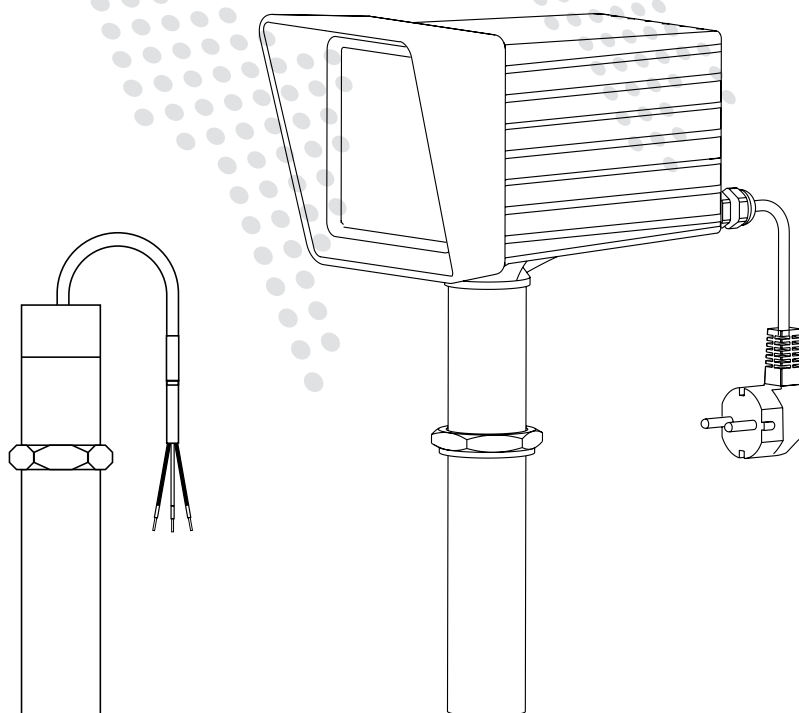



CONTENTS

Safety instructions	5
Electronic plastometer	6
Overview of available versions	6
Plastometer installation	8
Plastometer installation without display housing	8
Plastometer installation with display housing	9
Plastometer installation with offset wall housing	10
Installation examples plastometer holders	11
Electrical connections	14
Plastometer	14
Plastometer with temperature sensor	16
Plastometer with pressure display	18
Limit comparators	19
Plastometer with combined display	20
Limit comparators	21
Plastometer with pressure and temperature display	22
Limit comparators	23
Plastometer with 1x external display	24
Limit comparators	25
Plastometer with 2x external display	26
Limit comparators	27
Maintenance	28
Replacing the rubber protection	28
Sending for repair	29



SAFETY INSTRUCTIONS

THE FOLLOWING SAFETY INSTRUCTIONS ARE INTENDED TO PREVENT PERSONAL INJURIES AND MATERIAL DAMAGE

Never install or operate damaged products!

Unless expressly provided for, the following applications are prohibited:

- Use in potentially explosive areas
- Use in environments with harmful gases, vapours, oils etc.



Danger due to high material pressure!

- Ensure that the process connections are pressure-free before loosening them.
- Be aware of potentially increased material temperatures due to the addition of steam.
- Check for correct installation and secure attachment after re-installation.

Risk of electric shock!

- Before beginning work, always switch off all power supplies leading to the device!
- Observe the currently applicable accident prevention and safety regulations for electrical equipment!

Warning! Risk of injury from improper installation!

- Electrical installation may only be carried out by authorised specialist personnel and with suitable tools!
- Improper use may lead to injuries as well as damage to the device and its surroundings.
- Electrical installation must be carried out in accordance with the relevant regulations (e.g. cable cross-sections, fuses, protective conductor connection).
- Ensure a controlled restart following any work on the system.
- Safety instructions and proper use must be strictly observed!
- Operating personnel must be familiar with and observe the contents of the operating instructions.

Protective measures!


- Ensure potential equalisation of the installation.
- Only use shielded cables for transmitting analogue signals
- Avoid laying cables near high-voltage or high-frequency cables. In case of unavoidable cable runs, keep a minimum distance from high-voltage or high-frequency cables of at least 30 cm.
- Protective measures and devices must comply with the applicable regulations.

Protect the device from electromagnetic interference and observe the applicable EMC requirements.



ELECTRONIC PLASTOMETER

OVERVIEW OF AVAILABLE VERSIONS

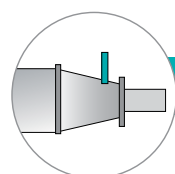

WITH NO DISPLAY

①




**PLASTOMETER
PRESSURE**

②



**PLASTOMETER
PRESSURE / TEMPERATURE**

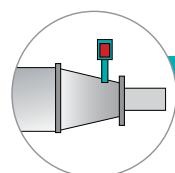

WITH A DISPLAY ON THE MEASURING INSTRUMENT

③



**PLASTOMETER
with one display
PRESSURE**

④





**PLASTOMETER
with two displays
PRESSURE / TEMPERATURE**

⑤



**PLASTOMETER
with a combined display
PRESSURE / TEMPERATURE**

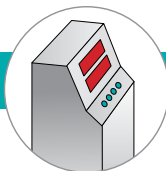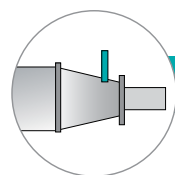

WITH AN EXTERNAL DISPLAY

⑥



**PLASTOMETER SET
with one external display
PRESSURE**

⑦



**PLASTOMETER SET
with two external displays
PRESSURE / TEMPERATURE**

ITEM NUMBER

TYPE

DESCRIPTION

6AELP0401 / 955 2 004	49.011-242	only pressure 0...4 bar
6AELP0601 / 955 2 006	49.011-242	only pressure 0...6 bar
6AELP02501 / 955 2 025	49.011-242	only pressure 0...25 bar
6AELP02500 / 955 2 925	49.011-010	only pressure 0...25 bar (0-10V)
① 6AELP04001 / 955 2 040	49.011-242	only pressure 0...40 bar
6AELP04000 / 955 2 940	49.011-010	only pressure 0...40 bar (0-10V)
6AELP06001 / 955 2 060	49.011-242	only pressure 0...60 bar
6AELP08001 / 955 2 080	49.011-242	only pressure 0...80 bar
6AELP1001 / 955 2 100	49.011-242	only pressure 0...100 bar

6AELP0411 / 955 2 104	49.011-242	Pressure/temperature 0...4 bar
6AELP0611 / 955 2 106	49.011-242	Pressure/temperature 0...6 bar
6AELP02511 / 955 2 250	49.011-242	Pressure/temperature 0...25 bar
6AELP02510 / 955 2 950	49.011-010	Pressure/temperature 0...25 bar (0-10V)
② 6AELP04011 / 955 2 400	49.011-242	Pressure/temperature 0...40 bar
6AELP04010 / 955 2 960	49.011-010	Pressure/temperature 0...40 bar (0-10V)
6AELP06011 / 955 2 600	49.011-242	Pressure/temperature 0...60 bar
6AELP08011 / 955 2 800	49.011-242	Pressure/temperature 0...80 bar
6AELP10011 / 955 2 110	49.011-242	Pressure/temperature 0...100 bar

③ 6AELP02502 / 955 2 125	49.012-242	Pressure/1 display 0...25 bar
6AELP04002 / 955 2 140	49.012-242	Pressure/1 display 0...40 bar

④ 6AELP02513 / 955 2 525	49.012-242	Pressure/temperature/2 displays 0...25 bar
6AELP04013 / 955 2 540	49.012-242	Pressure/temperature/2 displays 0...40 bar

⑤ 6AELP02514 / 955 2 825	49.012-242	Pressure/temperature/combined display 0...25 bar
6AELP04014 / 955 2 840	49.012-242	Pressure/temperature/combined display 0...40 bar

⑥ 6AELPS102515 / 955 2 625	49.012-242	Pressure/external display/15 m control line 0...25 bar
6AELPS104015 / 955 2 640	49.012-242	Pressure/external display/15 m control line 0...40 bar
6AELPS106015 / 955 2 660	49.012-242	Pressure/external display/15 m control line 0...60 bar

⑦ 6AELPS302515 / 955 2 725	49.012-242	Pressure/temperature/2 external displays/2x 15 m control line 0...25 bar
6AELPS304015 / 955 2 740	49.012-242	Pressure/temperature/2 external displays/2x 15 m control line 0...40 bar
6AELPS306015 / 955 2 760	49.012-242	Pressure/temperature/2 external displays/2x 15 m control line 0...60 bar

Other pressure ranges on request.

Type: 49.011-242 (4-20 mA version with 2 wire connection)


Type: 49.011-010 (0-10 V version)



PLASTOMETER INSTALLATION


WITH OUTPUT SIGNAL OR WITH INTEGRATED DISPLAYS

! Installation recommendation up to pressure zone 40 bar

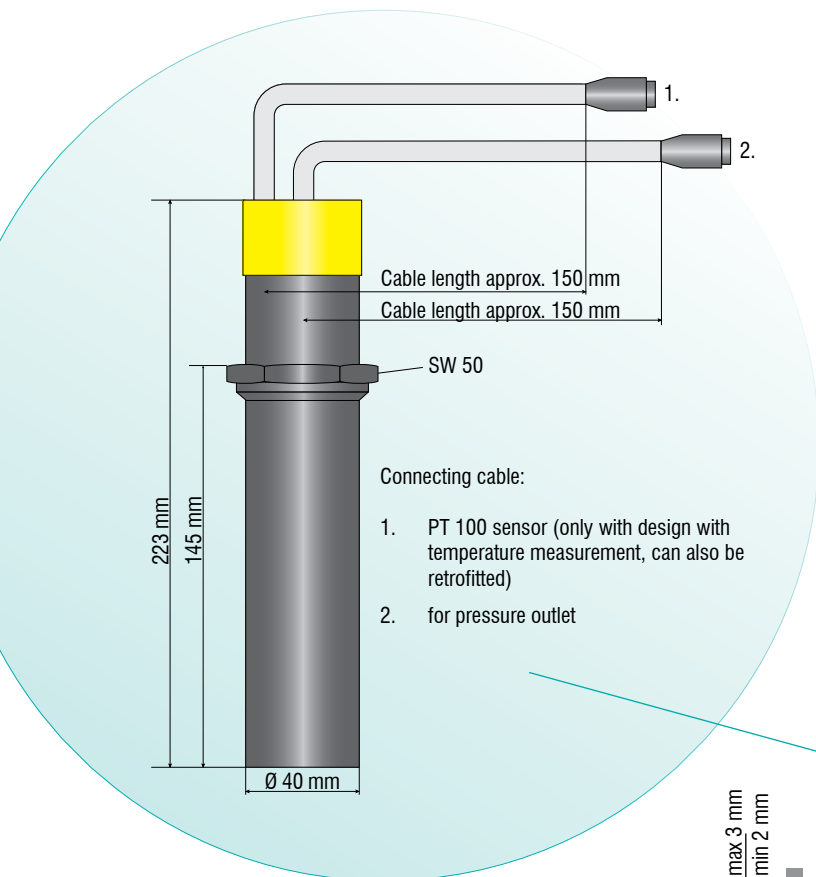

The electronic plastometer is used to measure the pressing pressure, and as an option the clay column temperature, in screw presses.

The system has a smooth shaft and a diameter of 40mm. The plastometer with output signal or with integrated displays is installed in the press head vertically from above.

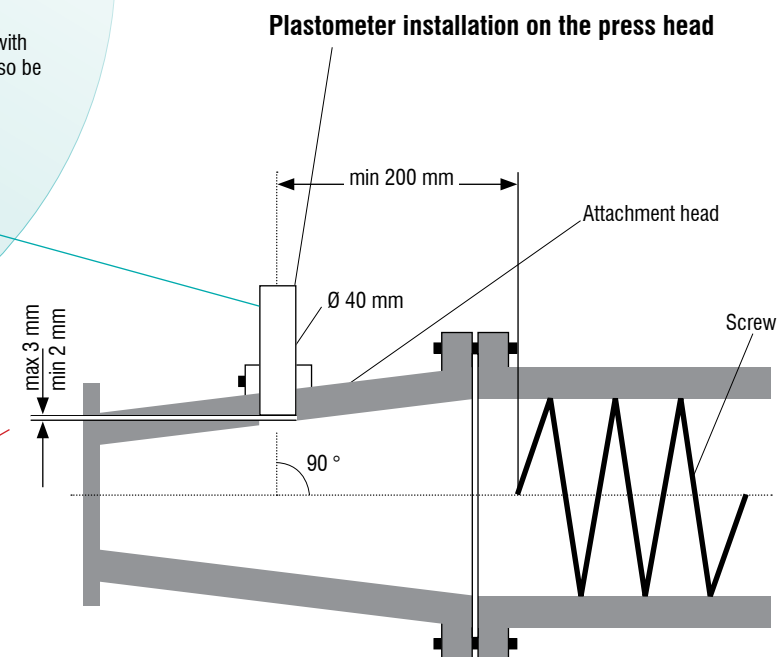


! Caution

Insert the shaft of the plastometer so that it is approx. 2-3 mm into the hole at the deepest point and does not protrude into the clay column under any circumstances!

! Installation in an already existing press head

You can find examples of installations with holders for the installation in an already existing press head. (see pages 11-13).


PLASTOMETER INSTALLATION WITH DISPLAY HOUSING

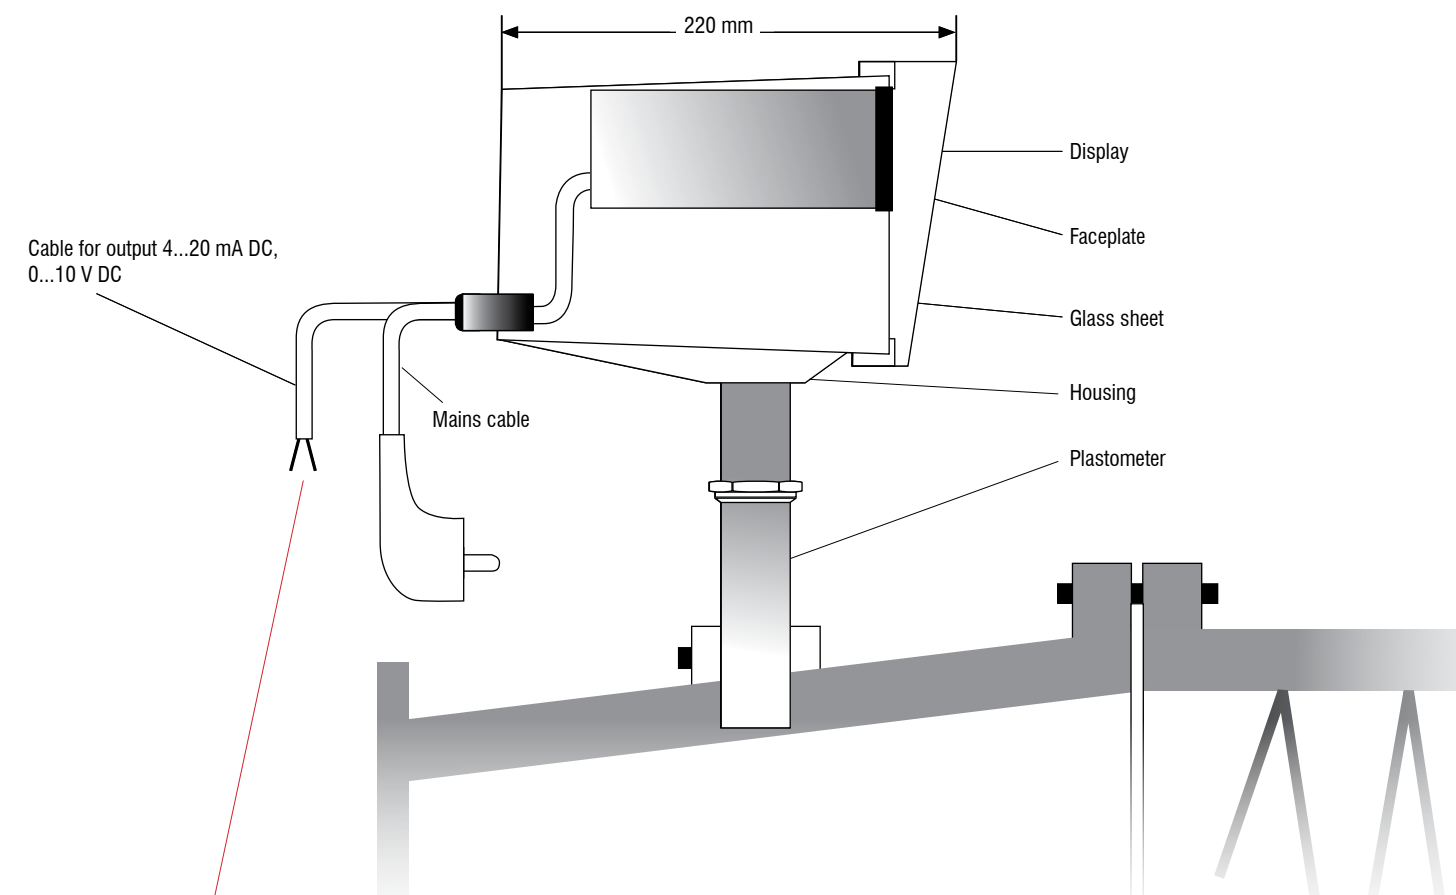

! Caution


If the output is not used, the wires must be securely separated from each other using terminals.

PLASTOMETER INSTALLATION WITH OFFSET WALL HOUSING

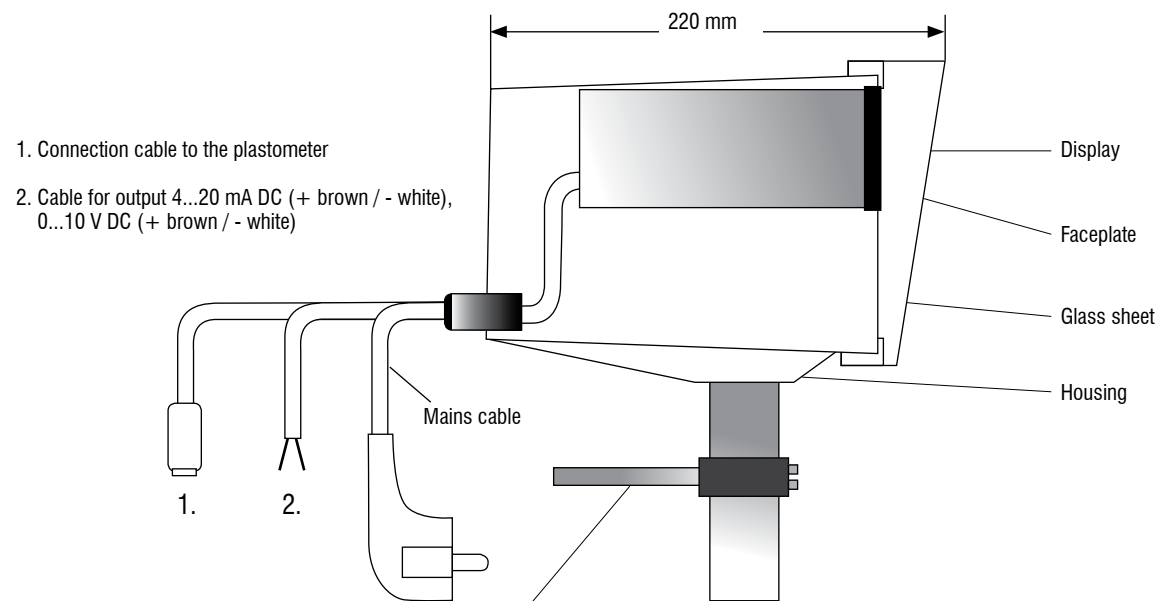

Attachment to the wall

Plastometer on the press head

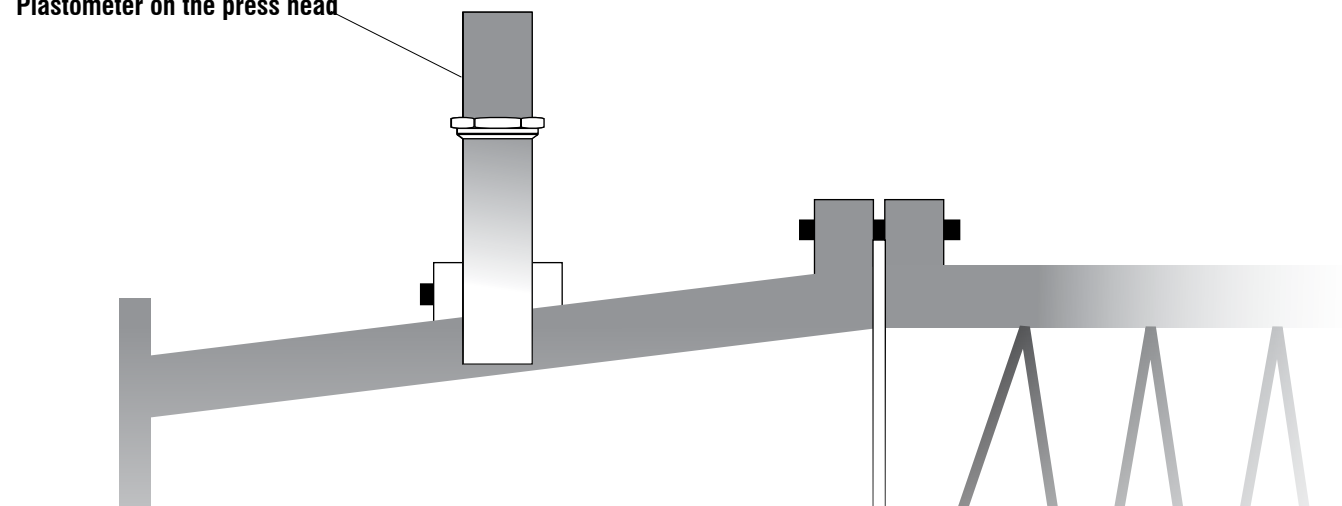

Caution


If the output is not used, the wires must be securely separated from each other using terminals.

PLASTOMETER INSTALLATION EXAMPLES PLASTOMETER HOLDERS




Example 1

Installation in an unprepared press head. This must be provided with a hole of $\varnothing 40 (+ 0.3)$ mm from above for installation. The holder is placed over this hole and screwed in.

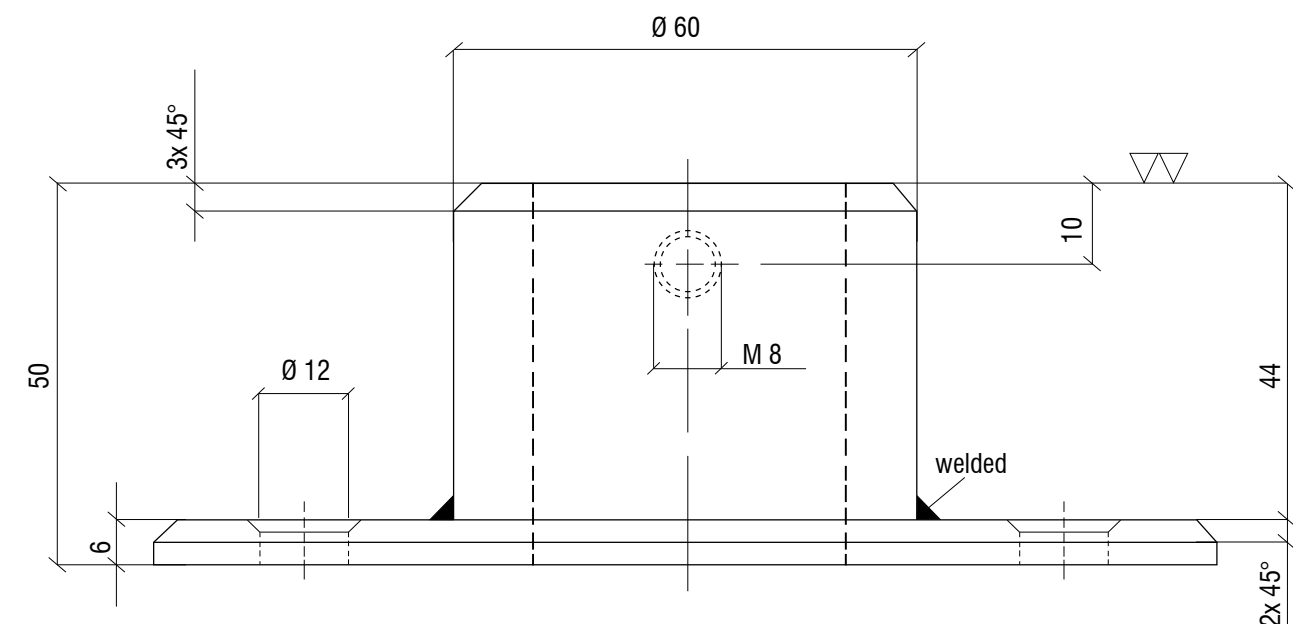

This base plate can also be manufactured as a circular plate. The circle or area depends on the press head.

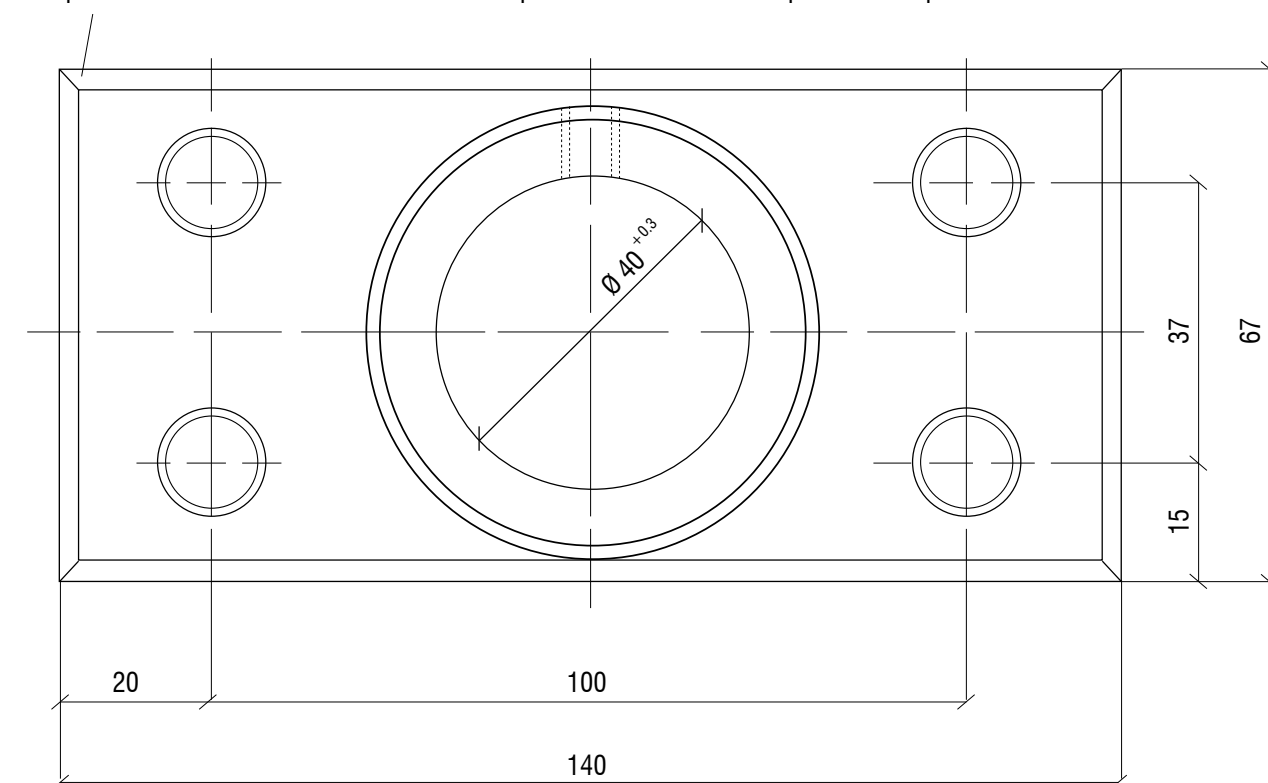


The following are required:

4 hexagon head screws M 10x25 DIN 558 and
1 hexagon head screw M 8x20 DIN 558




Example 2

Installation adaptor for electronic plastometer in the Morando press head
with an existing hole of $\varnothing 60$ mm

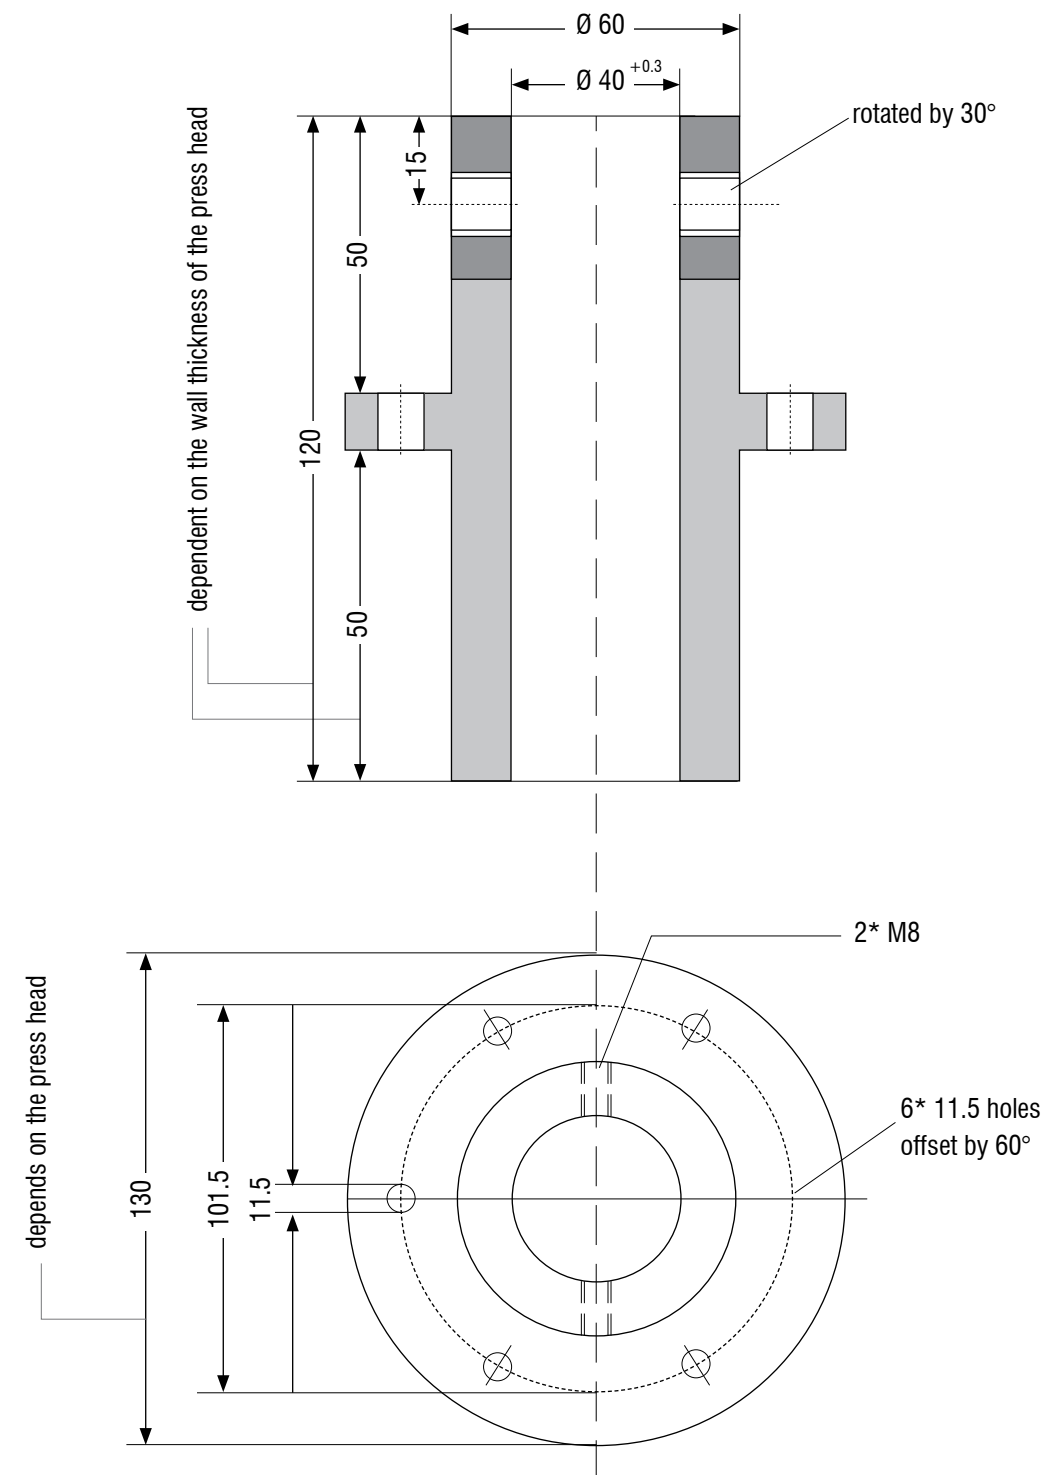

Example 3

Installation adaptor for electronic plastometer in the Pellerin press head
with an existing hole of $\varnothing 60$ mm

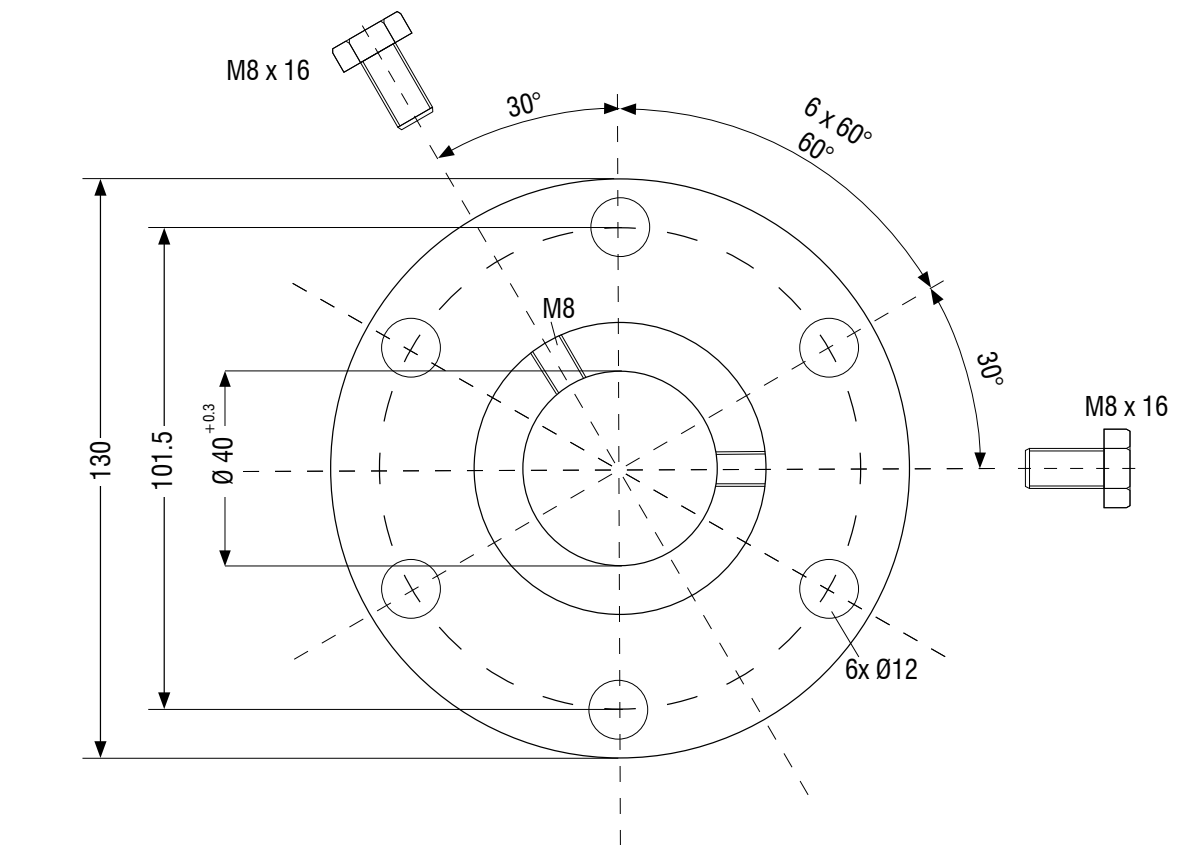


Material: 9 SMn Pb 28K




ELECTRICAL CONNECTION

WITH OUTPUT SIGNAL OR WITH INTEGRATED DISPLAYS



PLASTOMETER ELECTRICAL CONNECTION WITH NO DISPLAY

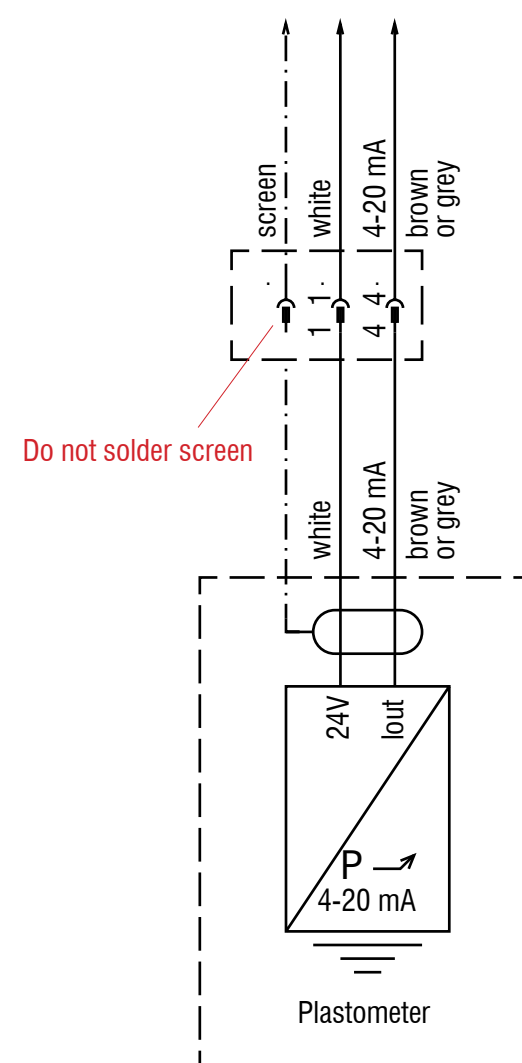


Plastometer plug connection side

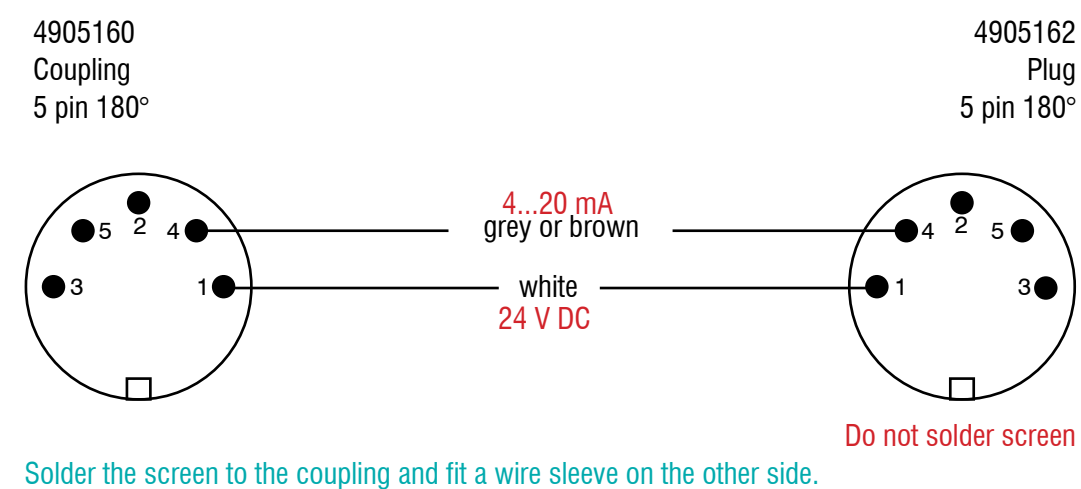

PLASTOMETER ELECTRICAL CONNECTION WITH TEMPERATURE SENSOR

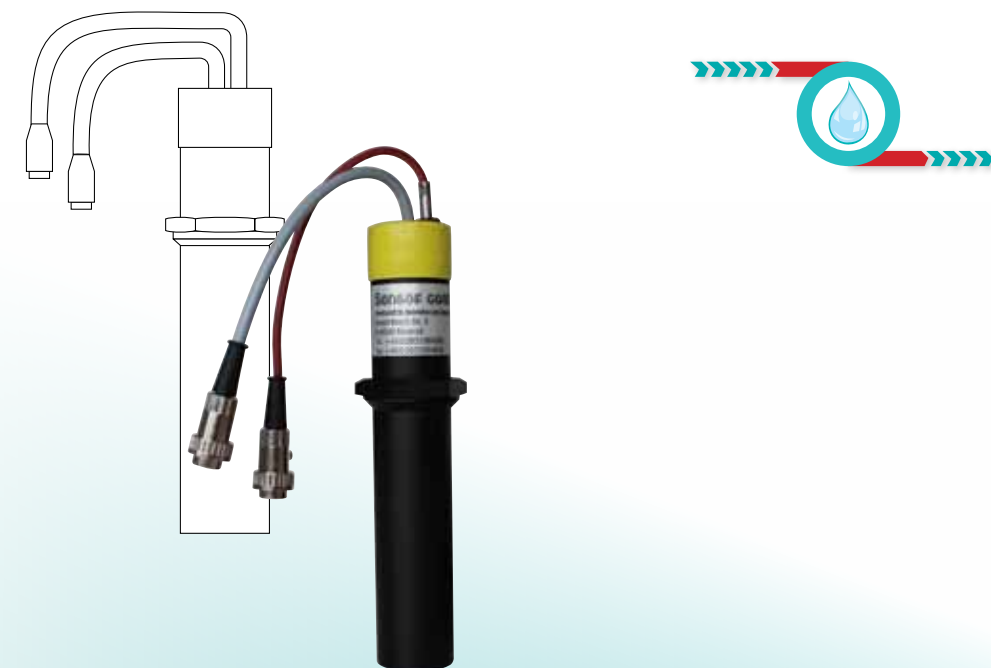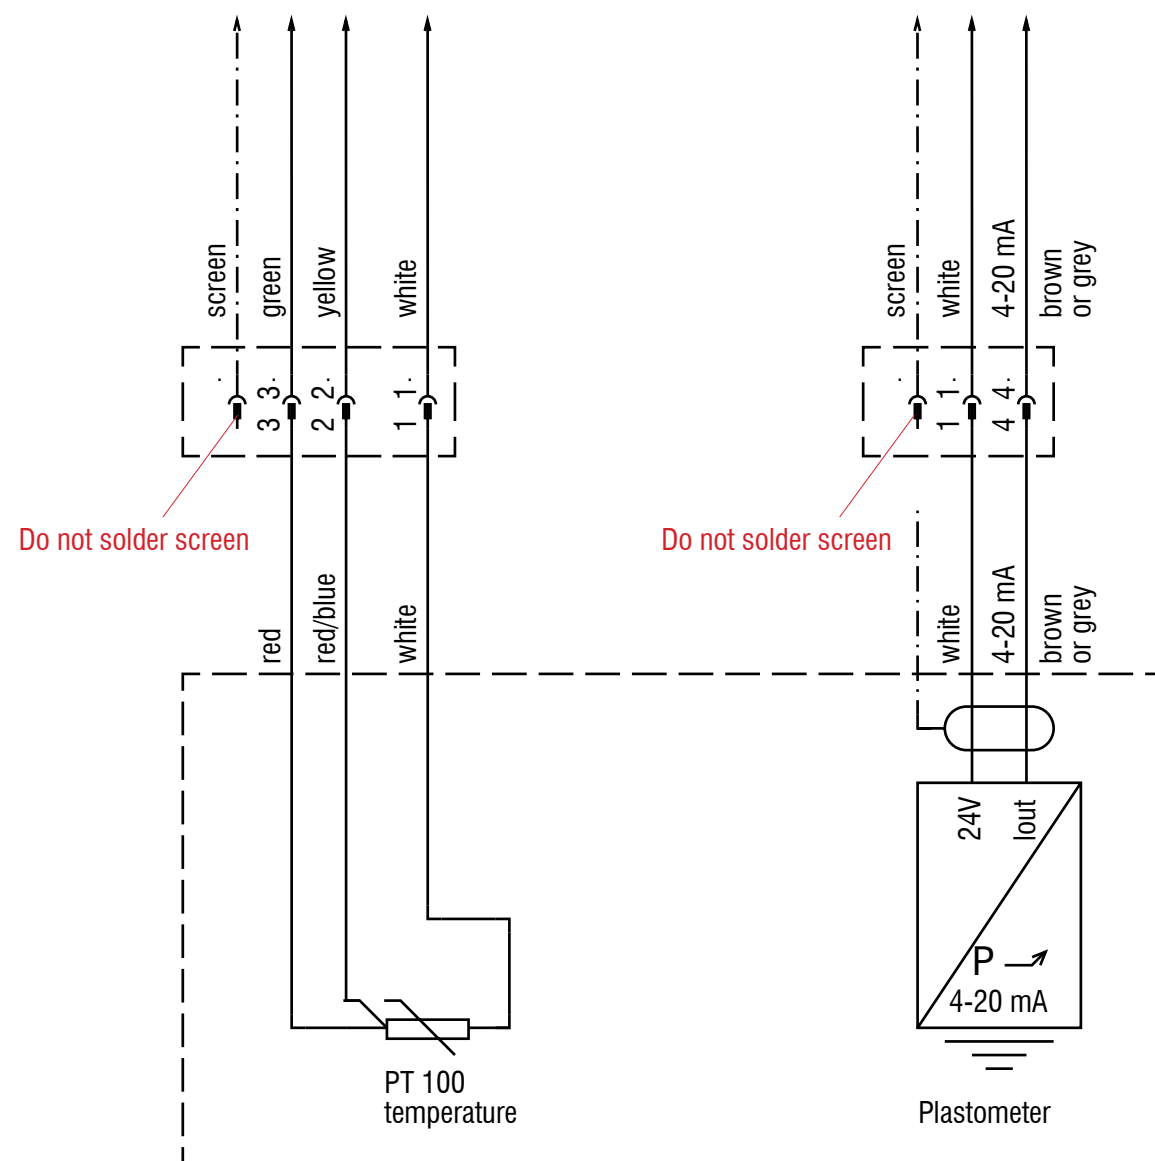


Plastometer plug connection side

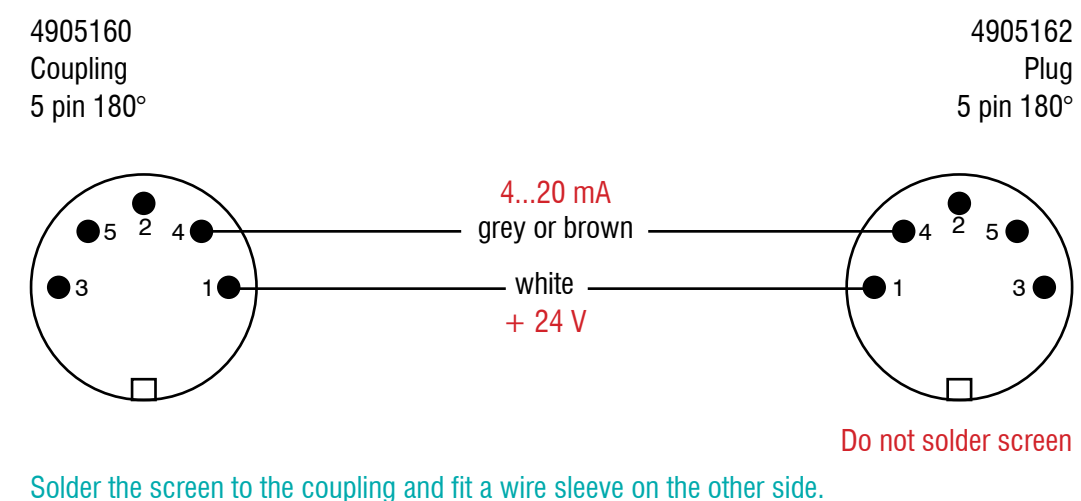


Solder the screen to the coupling and fit a wire sleeve on the other side.

Sensor Pt 100 plug connection side

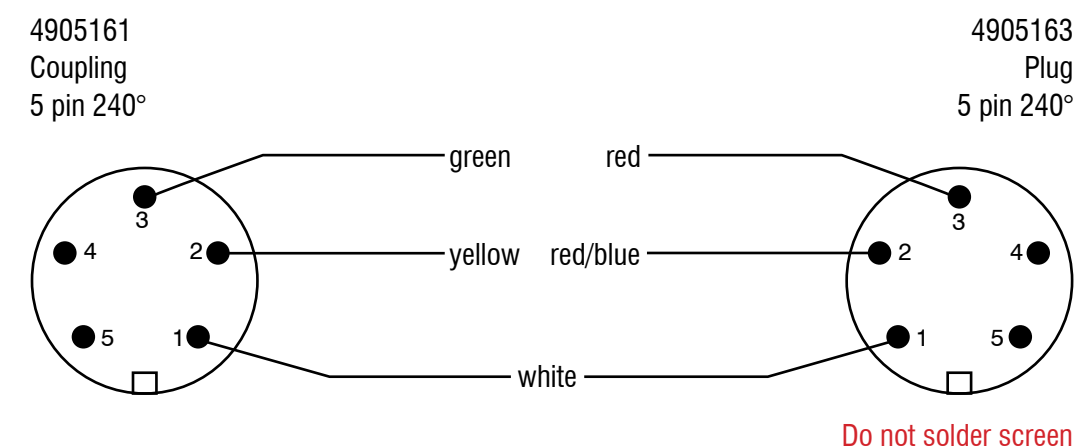


Solder the screen to the coupling and fit a wire sleeve on the other side.

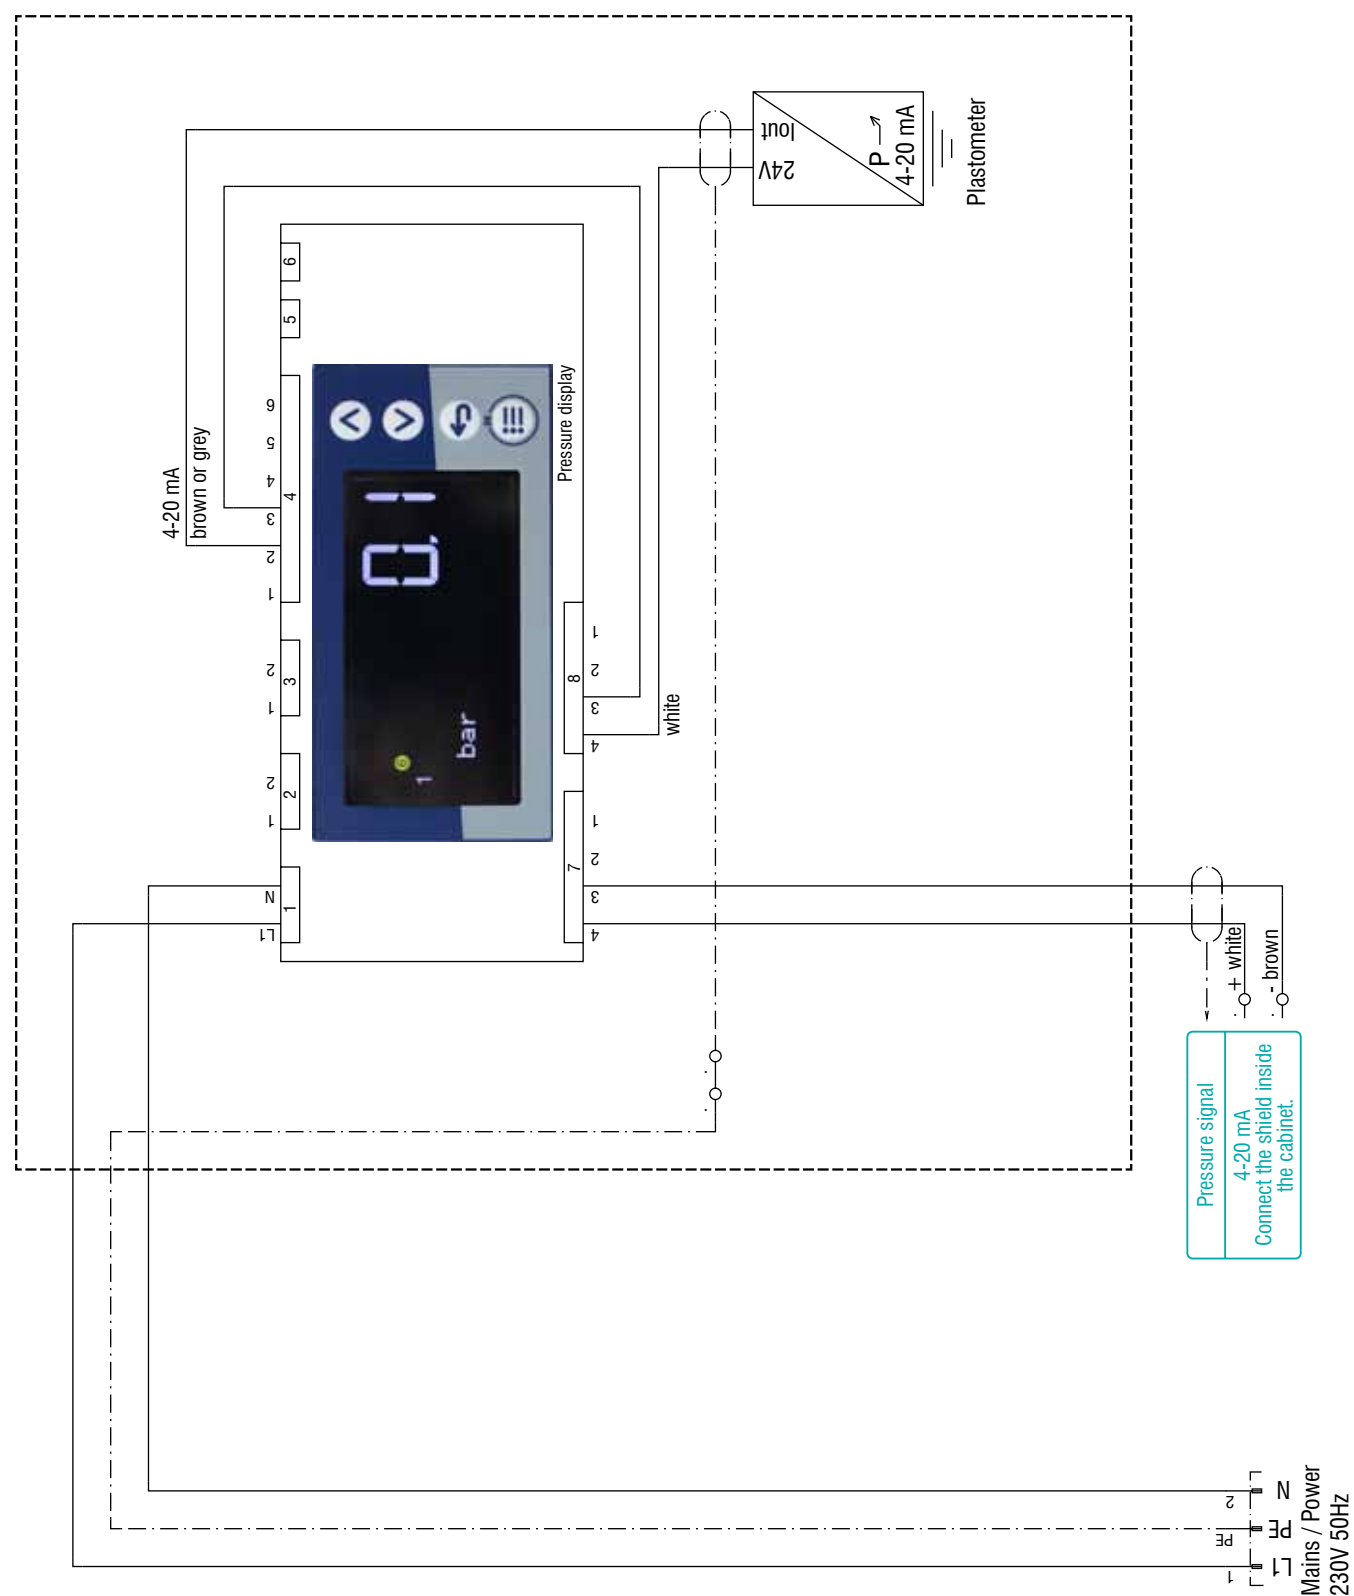

—

1st limit comparator (e.g. for minimum) Connector terminal block 2

2. limit comparator (e.g. for maximum) Connector terminal block 3

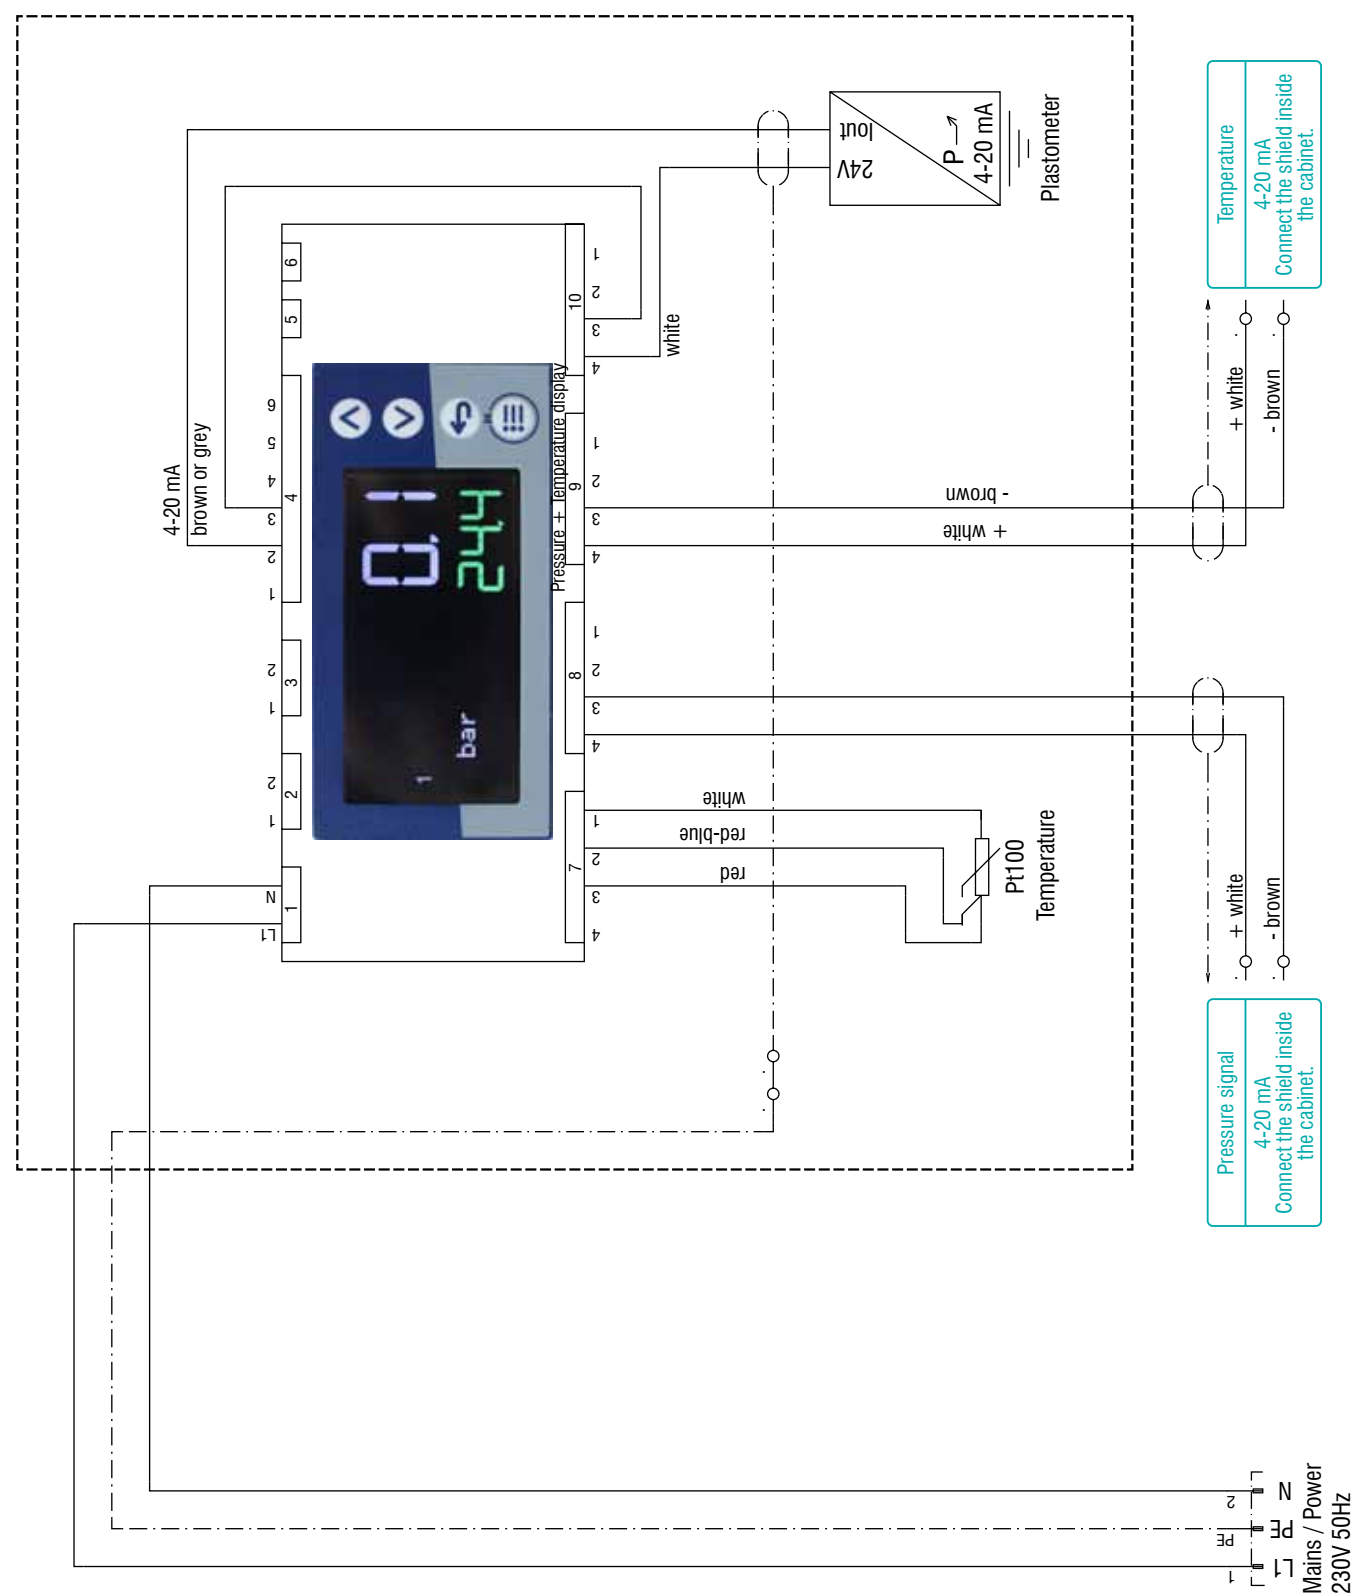

Switching power: 250 V AC/3 A, 24 V DC/2 A

2


2



Switching power: 250 V AC/3 A, 24 V DC/2 A

1
2


PLASTOMETER ELECTRICAL CONNECTION WITH 1 EXTERNAL DISPLAY

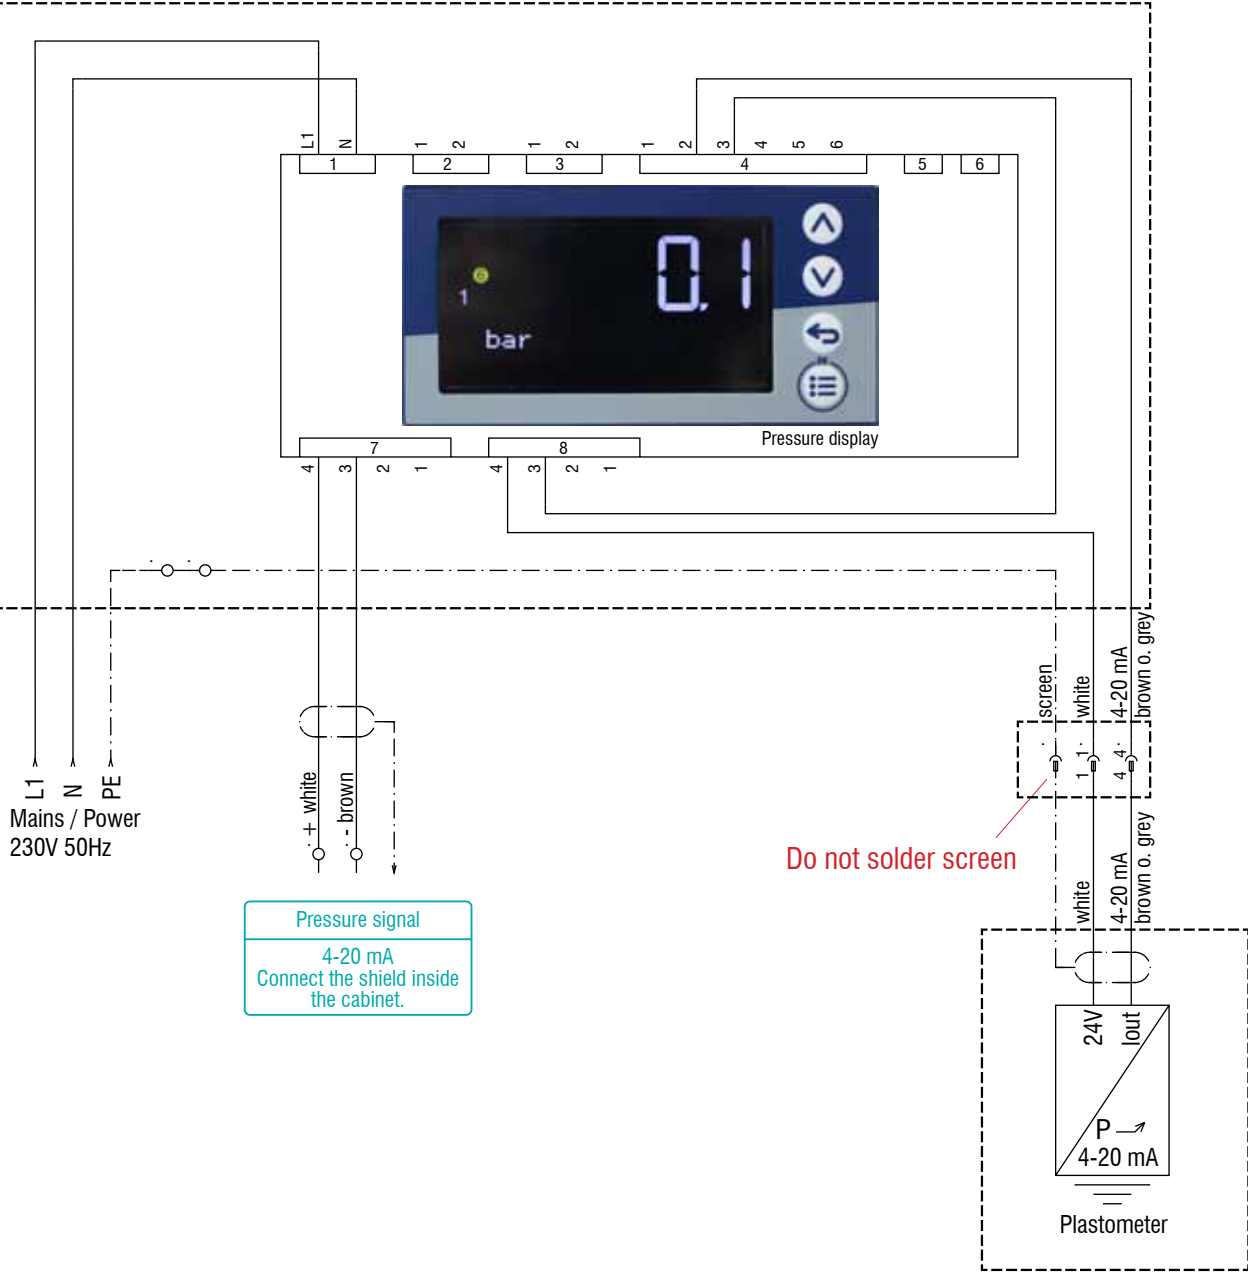


Option: limit comparators

Switching power: 250 V AC/3 A, 24 V DC/2 A

- | | | |
|----------------------|--------------------|----------------------------|
| 1st limit comparator | (e.g. for minimum) | Connector terminal block 2 |
| 2. limit comparator | (e.g. for maximum) | Connector terminal block 3 |




PLASTOMETER ELECTRICAL CONNECTION **WITH 2 EXTERNAL DISPLAYS**

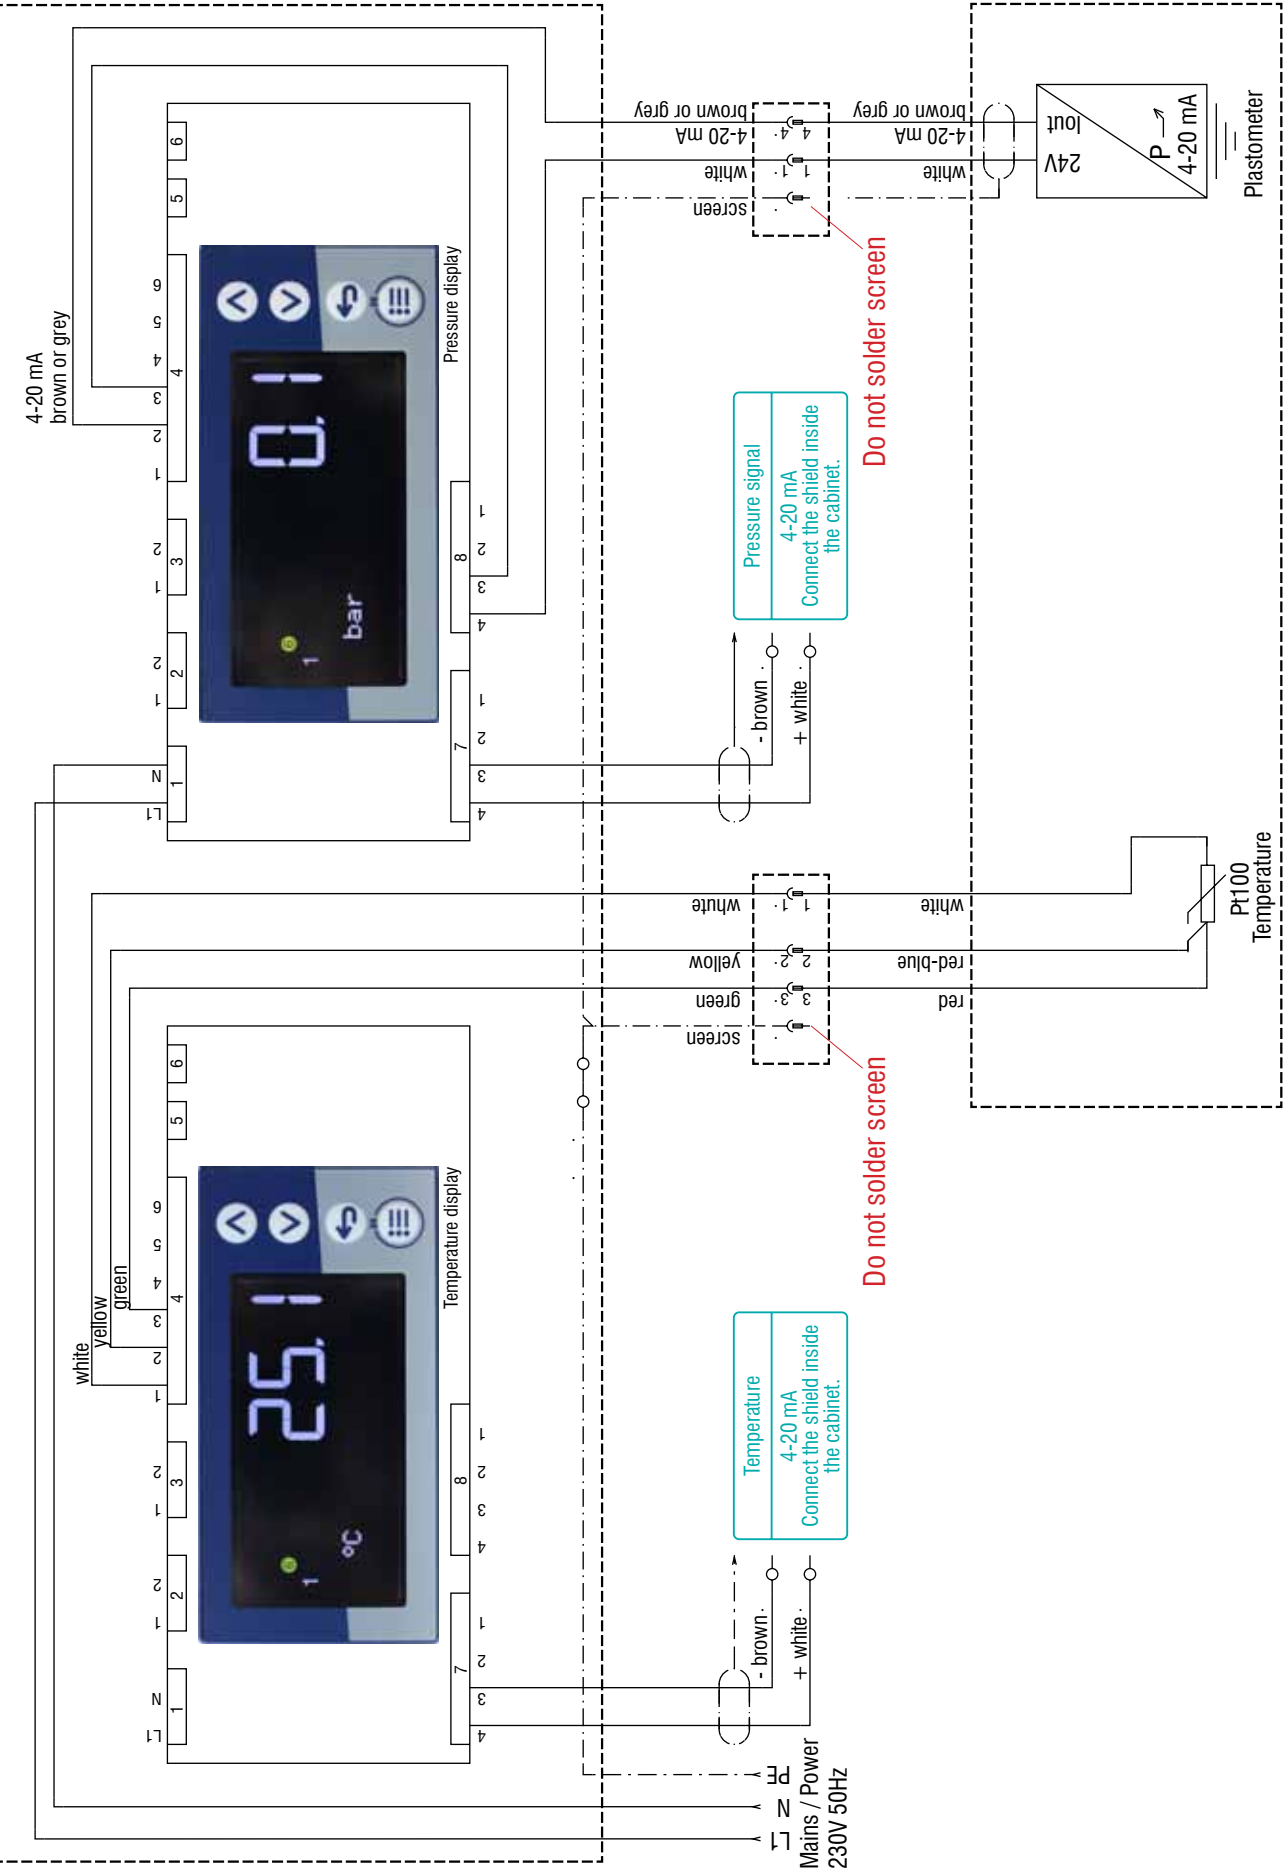

Option: limit comparators

Switching power: 250 V AC/3 A, 24 V DC/2 A

- | | | |
|----------------------|--------------------|----------------------------|
| 1st limit comparator | (e.g. for minimum) | Connector terminal block 2 |
| 2. limit comparator | (e.g. for maximum) | Connector terminal block 3 |





PLASTOMETER MAINTENANCE

REPLACING THE RUBBER PROTECTION

Dismantle the plastometer

Disconnect the connection and remove the plug

Pull the cover off the shaft over the cable

Remove the PT 100 sensor (if available) from the shaft

Unscrew the pressure sensor with a socket wrench

Replacing the rubber protection

Assemble in reverse order

Only screw the pressure sensor hand-tight in the shaft
(There must be no pre-pressure)

There must be no air cushion between the pressure sensor and the rubber protection

SENDING FOR REPAIR

We're happy to repair any devices that are faulty or have suffered wear in our workshop.

Please send the faulty device with a description of the fault to:



Robert Bosch Strasse 5
56566 Neuwied
Germany

We reserve the right to make technical changes without notice.
Technische Änderungen vorbehalten.
Sous réserve de modifications techniques.

© Sensor Control, 2026
PLASTOMETER_Betriebsanleitung_englisch_06-2026



Robert-Bosch-Straße 5
D-56566 Neuwied

Tel. +49 (0) 26 31 / 96 40 00
Fax. +49 (0) 26 31 / 96 40 40

Internet: www.sensor-control.de
E-Mail: info@sensor-control.de

