Sensor control
Gesellschaft für Sensorik und Automation mbH

OPERATING MANUAL
ELECTRONIC PLASTOMETER

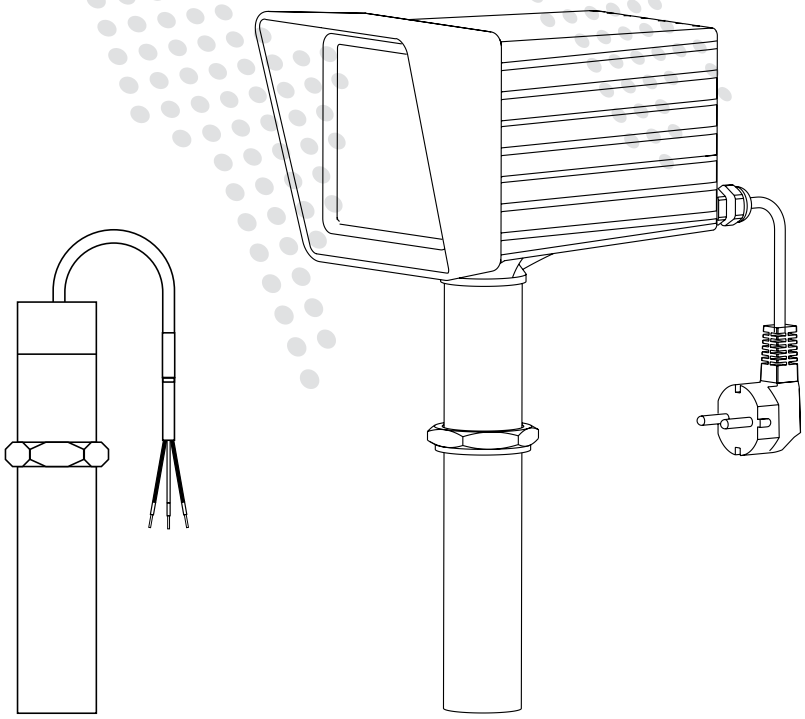

Robert-Bosch-Straße 5
D-56566 Neuwied

Tel. +49 (0) 26 31 / 96 40 00
Fax. +49 (0) 26 31 / 96 40 40

Website: www.sensor-control.de
Email: info@sensor-control.de

CONTENTS

Safety instructions 5

Electronic plastometer 6

Overview of available versions 6

Plastometer installation 8

Plastometer installation without display housing 8

Plastometer installation with display housing 9

Plastometer installation with offset wall housing 10

Installation examples plastometer holders 11

Electrical connections 14

Plastometer 14

Plastometer with temperature sensor 16

Plastometer with pressure display 18

Limit comparators 19

Plastometer with combined display 20

Limit comparators 21

Plastometer with pressure and temperature display 22

Limit comparators 23

Plastometer with 1x external display 24

Limit comparators 25

Plastometer with 2x external display 26

Limit comparators 27

Maintenance 28

Replacing the rubber protection 28

Sending for repair 29

SAFETY INSTRUCTIONS

THE FOLLOWING SAFETY INSTRUCTIONS ARE INTENDED TO PREVENT PERSONAL INJURIES AND MATERIAL DAMAGE

Never install or operate damaged products!

Unless expressly provided for, the following applications are prohibited:

- Use in potentially explosive areas
- Use in environments with harmful gases, vapours, oils etc.

Danger due to high material pressure!

- Ensure that the process connections are pressure-free before loosening them.
- Be aware of potentially increased material temperatures due to the addition of steam.
- Check for correct installation and secure attachment after re-installation.

Risk of electric shock!

- Before beginning work, always switch of all power supplies leading to the device!
- Observe the currently applicable accident prevention and safety regulations for electrical equipment!

Warning! Risk of injury from improper installation!

- Electrical installation may only be carried out by authorised specialist personnel and with suitable tools!
- Improper use may lead to injuries as well as damage to the device and its surroundings.
- Electrical installation must be carried out in accordance with the relevant regulations (e.g. cable cross-sections, fuses, protective conductor connection).
- Ensure a controlled restart following any work on the system.
- Safety instructions and proper use must be strictly observed!
- Operating personnel must be familiar with and observe the contents of the operating instructions.

Protective measures!

- Ensure potential equalisation of the installation.
- Only use shielded cables for transmitting analogue signals
- Avoid laying cables near high-voltage or high-frequency cables. In case of unavoidable cable runs, keep a minimum distance from high-voltage or high-frequency cables of at least 30 cm.
- Protective measures and devices must comply with the applicable regulations.

Protect the device from electromagnetic interference and observe the applicable EMC requirements.

ELECTRONIC PLASTOMETER

OVERVIEW OF AVAILABLE VERSIONS

WITH NO DISPLAY

①

PLASTOMETER
PRESSURE

②

PLASTOMETER
PRESSURE / TEMPERATURE

WITH A DISPLAY ON THE MEASURING INSTRUMENT

③

PLASTOMETER
with one display
PRESSURE

④

PLASTOMETER
with two displays
PRESSURE / TEMPERATURE

⑤

PLASTOMETER
with a combined display
PRESSURE / TEMPERATURE

WITH AN EXTERNAL DISPLAY

⑥

PLASTOMETER SET
with one external display
PRESSURE

⑦

PLASTOMETER SET
with two external displays
PRESSURE / TEMPERATURE

	ITEM NUMBER	TYPE	DESCRIPTION
①	6AELP0401 / 955 2 004	49.011-242	only pressure 0…4 bar
	6AELP0601 / 955 2 006	49.011-242	only pressure 0…6 bar
	6AELP02501 / 955 2 025	49.011-242	only pressure 0…25 bar
	6AELP02500 / 955 2 925	49.011-010	only pressure 0…25 bar (0-10V)
	6AELP04001 / 955 2 040	49.011-242	only pressure 0…40 bar
	6AELP04000 / 955 2 940	49.011-010	only pressure 0…40 bar (0-10V)
	6AELP06001 / 955 2 060	49.011-242	only pressure 0…60 bar
	6AELP08001 / 955 2 080	49.011-242	only pressure 0…80 bar
	6AELP1001 / 955 2 100	49.011-242	only pressure 0…100 bar
②	6AELP0411 / 955 2 104	49.011-242	Pressure/temperature 0...4 bar
	6AELP0611 / 955 2 106	49.011-242	Pressure/temperature 0...6 bar
	6AELP02511 / 955 2 250	49.011-242	Pressure/temperature 0...25 bar
	6AELP02510 / 955 2 950	49.011-010	Pressure/temperature 0...25 bar (0-10V)
	6AELP04011 / 955 2 400	49.011-242	Pressure/temperature 0...40 bar
	6AELP04010 / 955 2 960	49.011-010	Pressure/temperature 0...40 bar (0-10V)
	6AELP06011 / 955 2 600	49.011-242	Pressure/temperature 0...60 bar
	6AELP08011 / 955 2 800	49.011-242	Pressure/temperature 0...80 bar
	6AELP10011 / 955 2 110	49.011-242	Pressure/temperature 0...100 bar
③	6AELP02502 / 955 2 125	49.012-242	Pressure/1 display 0...25 bar
	6AELP04002 / 955 2 140	49.012-242	Pressure/1 display 0...40 bar
④	6AELP02513 / 955 2 525	49.012-242	Pressure/temperature/2 displays 0...25 bar
	6AELP04013 / 955 2 540	49.012-242	Pressure/temperature/2 displays 0...40 bar
⑤	6AELP02514 / 955 2 825	49.012-242	Pressure/temperature/combined display 0...25 bar
	6AELP04014 / 955 2 840	49.012-242	Pressure/temperature/combined display 0...40 bar
⑥	6AELPS102515 / 955 2 625	49.012-242	Pressure/external display/15 m control line 0...25 bar
	6AELPS104015 / 955 2 640	49.012-242	Pressure/external display/15 m control line 0...40 bar
	6AELPS106015 / 955 2 660	49.012-242	Pressure/external display/15 m control line 0...60 bar
⑦	6AELPS302515 / 955 2 725	49.012-242	Pressure/temperature/2 external displays/2x 15 m control line 0...25 bar
	6AELPS304015 / 955 2 740	49.012-242	Pressure/temperature/2 external displays/2x 15 m control line 0...40 bar
	6AELPS306015 / 955 2 760	49.012-242	Pressure/temperature/2 external displays/2x 15 m control line 0...60 bar

Other pressure ranges on request.

Type: 49.011-242 (4-20 mA version with 2 wire connection)
Type: 49.011-010 (0-10 V version)

PLASTOMETER INSTALLATION

WITH OUTPUT SIGNAL OR WITH INTEGRATED DISPLAYS

Installation recommendation up to pressure zone 40 bar

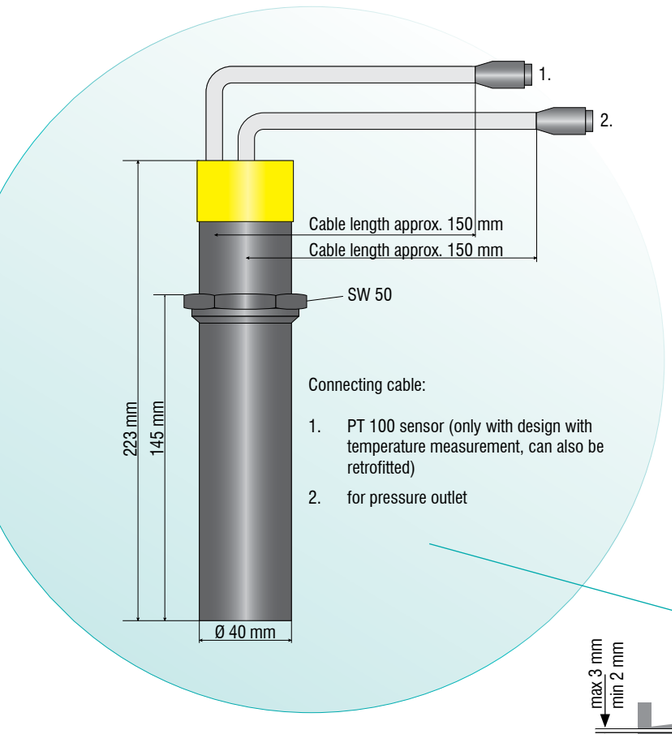

Connecting cable:

1. PT 100 sensor (only with design with temperature measurement, can also be retrofitted)
2. for pressure outlet

The electronic plastometer is used to measure the pressing pressure, and as an option the clay column temperature, in screw presses.

The system has a smooth shaft and a diameter of 40mm. The plastometer with output signal or with integrated displays is installed in the press head vertically from above.

Plastometer installation on the press head

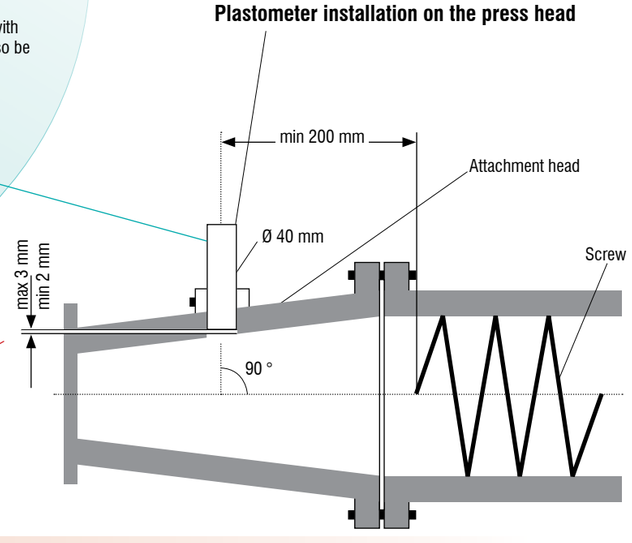

Caution

Insert the shaft of the plastometer so that it is approx. 2-3 mm into the hole at the deepest point and does not protrude into the clay column under any circumstances!

Installation in an already existing press head

You can find examples of installations with holders for the installation in an already existing press head. (see pages 11-13).

PLASTOMETER INSTALLATION WITH DISPLAY HOUSING

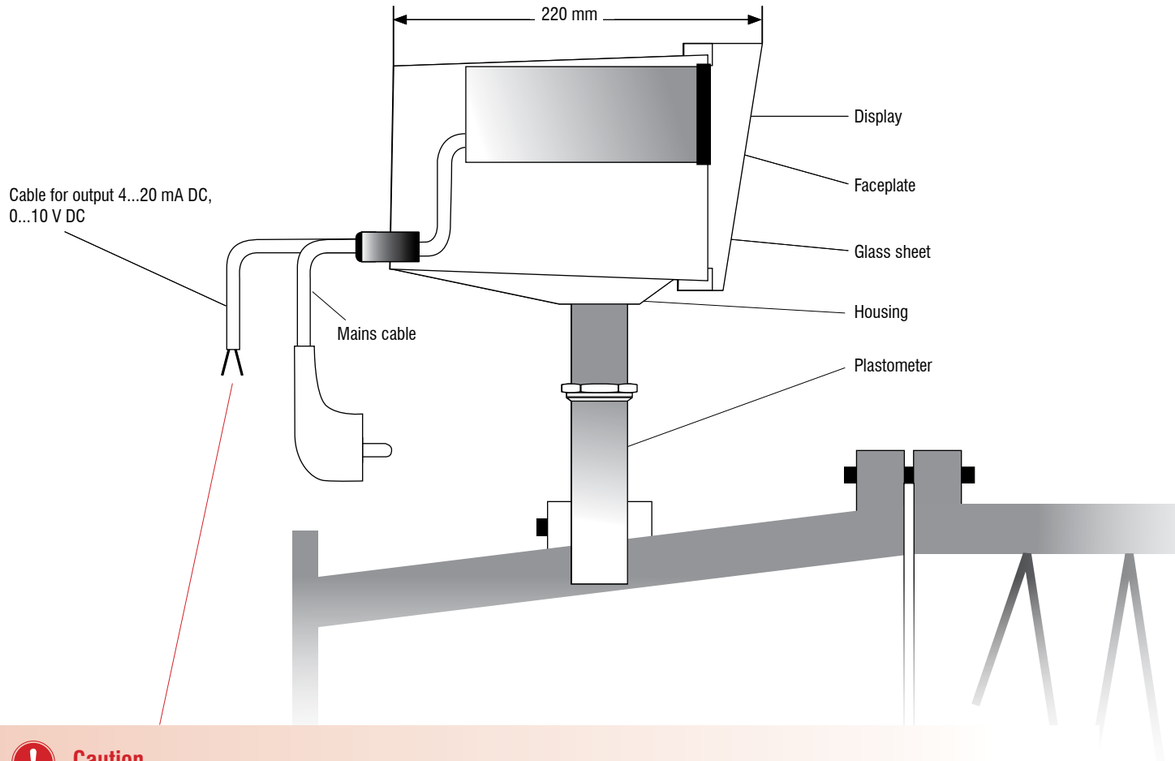

Caution

If the output is not used, the wires must be securely separated from each other using terminals.

PLASTOMETER INSTALLATION
WITH OFFSET WALL HOUSING

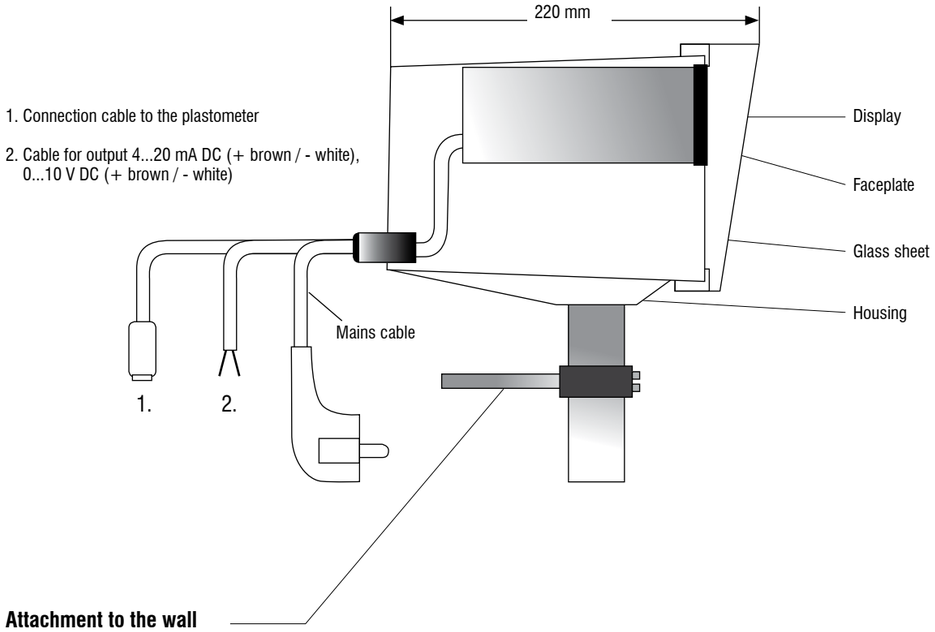

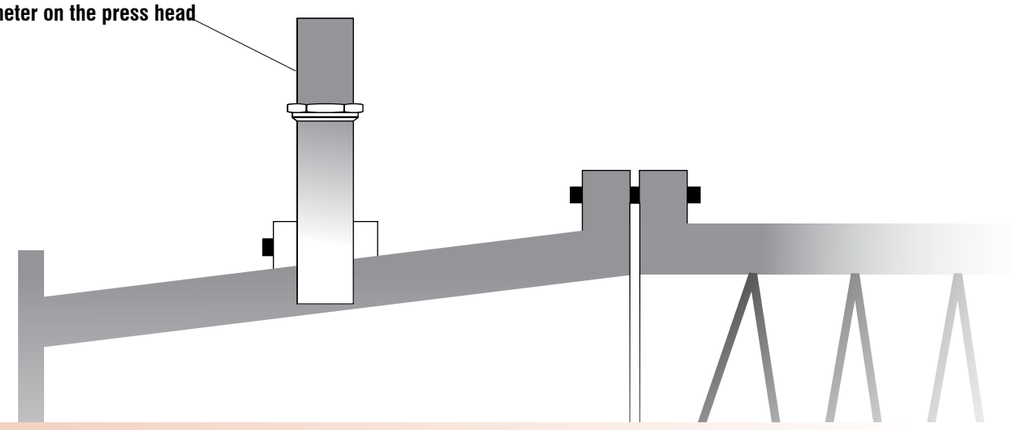

Caution

If the output is not used, the wires must be securely separated from each other using terminals.

PLASTOMETER INSTALLATION
EXAMPLES PLASTOMETER HOLDERS

Example 1

Installation in an unprepared press head. This must be provided with a hole of Ø 40 (+ 0.3) mm from above for installation. The holder is placed over this hole and screwed in.

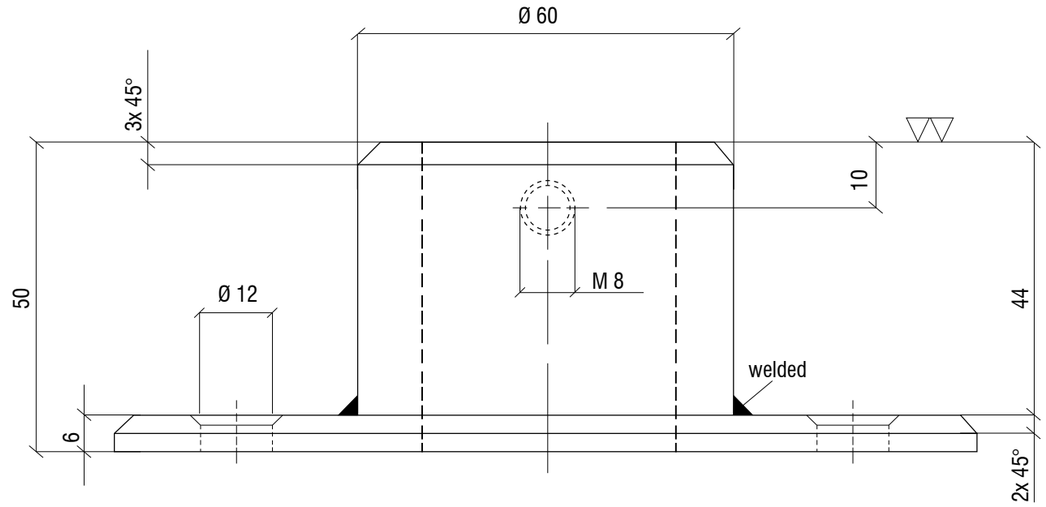

This base plate can also be manufactured as a circular plate. The circle or area depends on the press head.

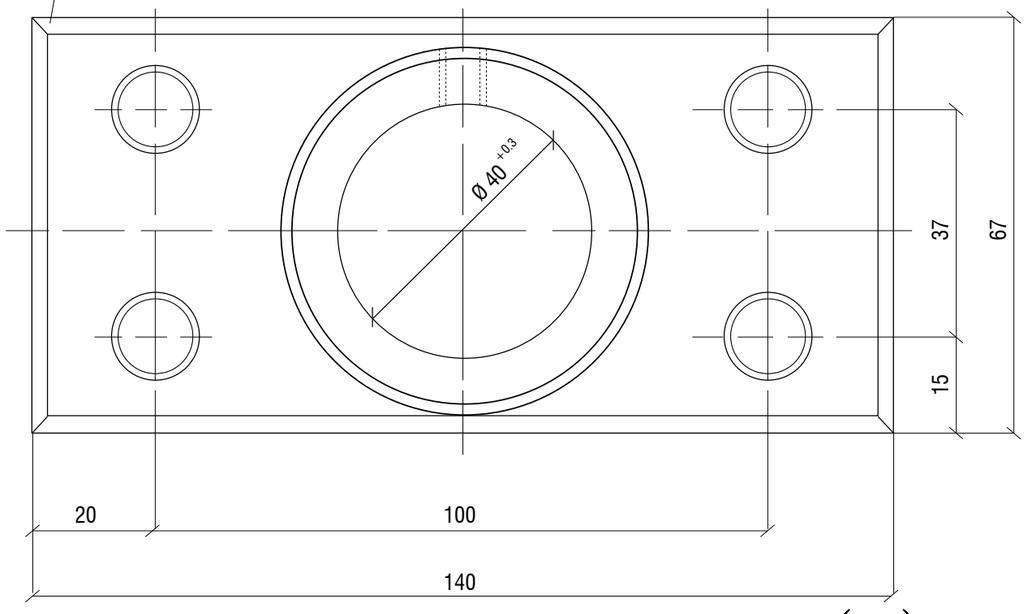

The following are required: 4 hexagon head screws M 10x25 DIN 558 and 1 hexagon head screw M 8x20 DIN 558 ▽ (▽▽)

Example 2

Installation adaptor for electronic plastometer in the Morando press head
with an existing hole of Ø 60 mm

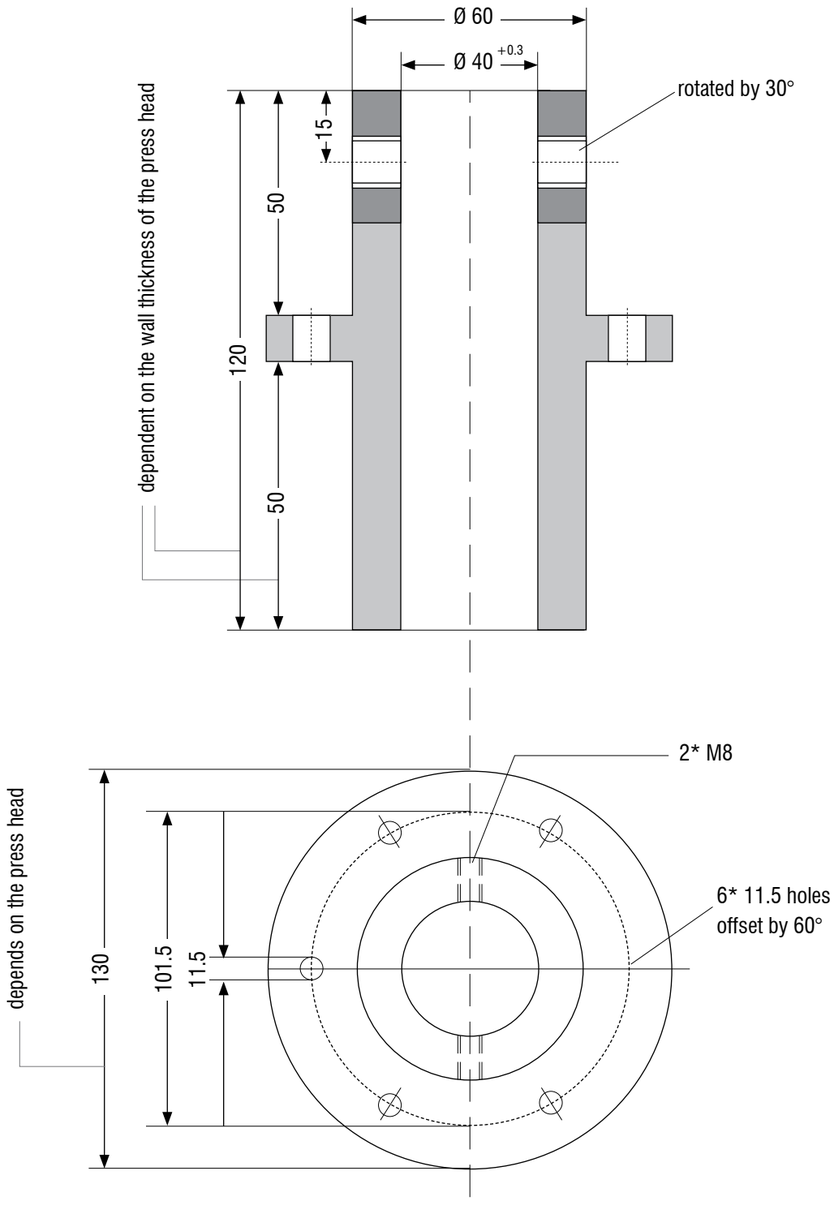

Example 3

Installation adaptor for electronic plastometer in the Pellerin press head
with an existing hole of Ø 60 mm

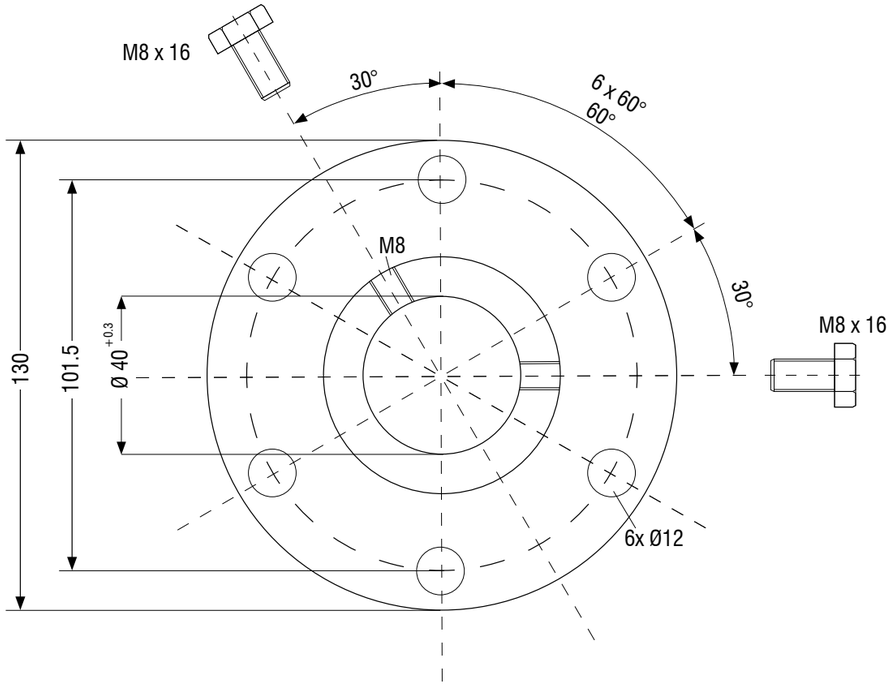

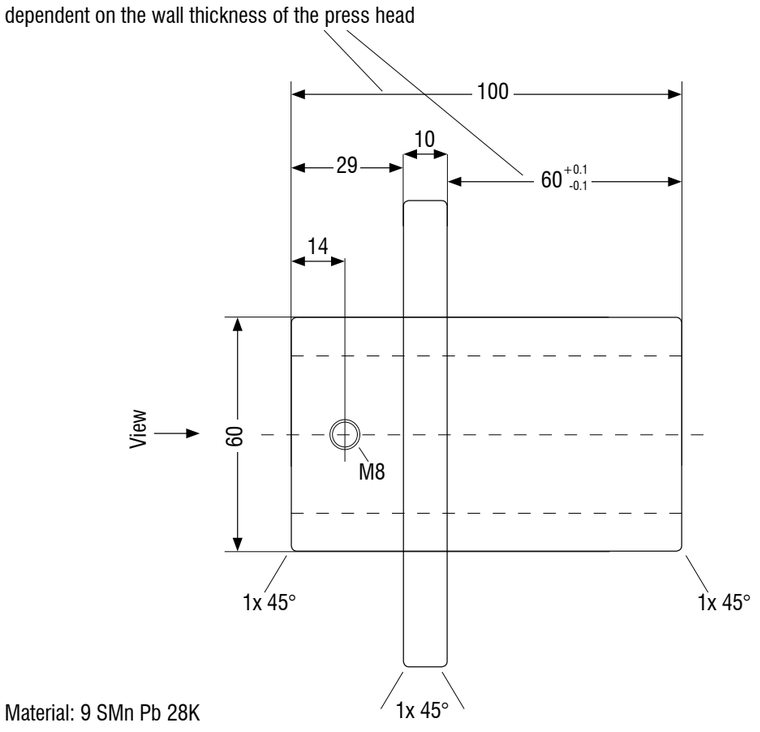

Material: 9 SMn Pb 28K

WITH OUTPUT SIGNAL OR WITH INTEGRATED DISPLAYS

PLASTOMETER ELECTRICAL CONNECTION WITH NO DISPLAY

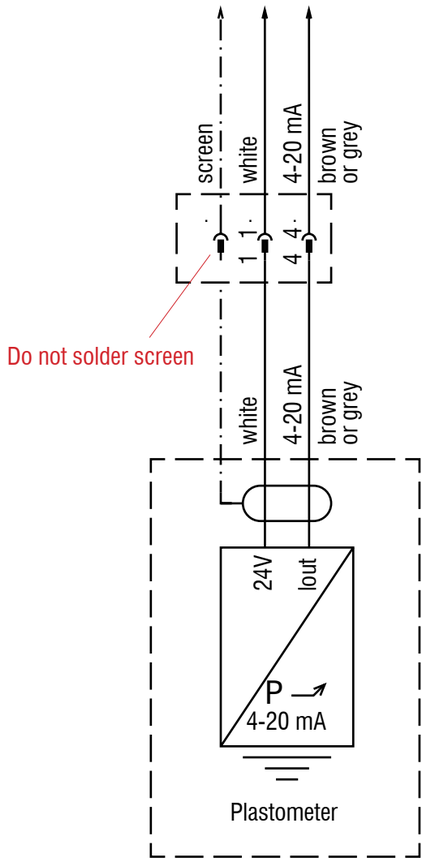

Plastometer plug connection side

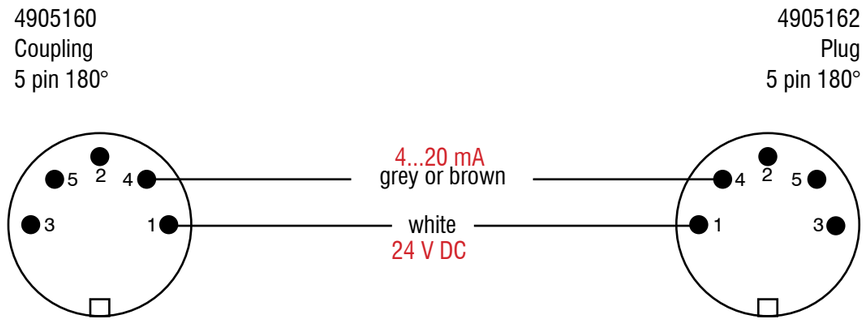

Solder the screen to the coupling and fit a wire sleeve on the other side.

PLASTOMETER ELECTRICAL CONNECTION
WITH TEMPERATURE SENSOR

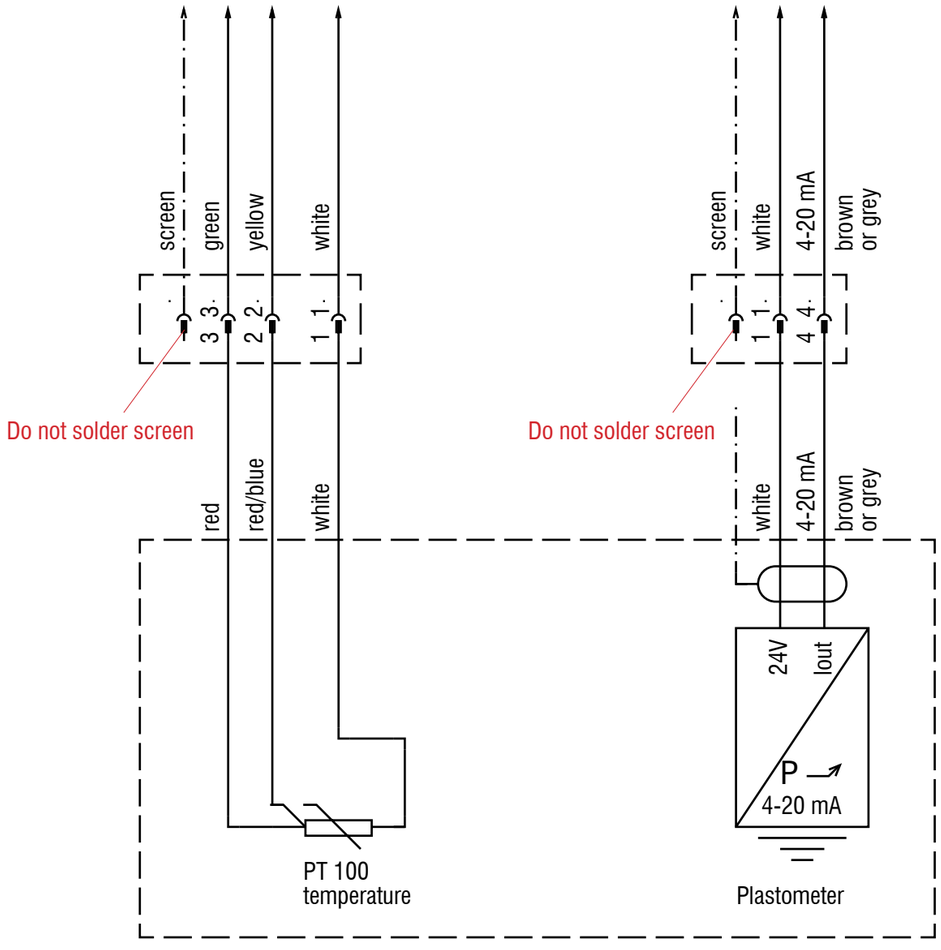

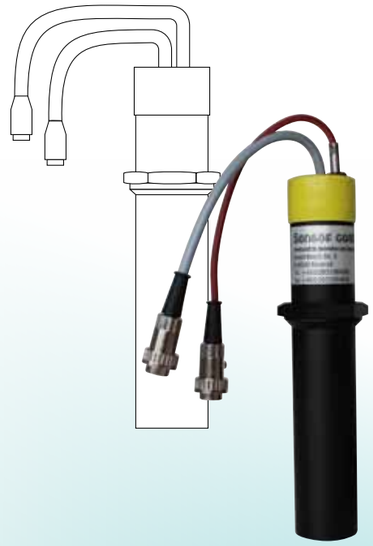

Plastometer plug connection side

4905160
Coupling
5 pin 180°

4905162
Plug
5 pin 180°

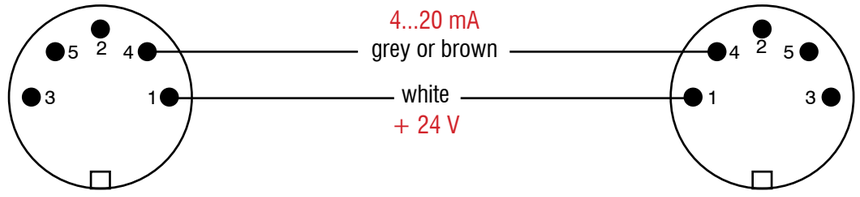

Do not solder screen

Solder the screen to the coupling and fit a wire sleeve on the other side.

Sensor Pt 100 plug connection side

4905161
Coupling
5 pin 240°

4905163
Plug
5 pin 240°

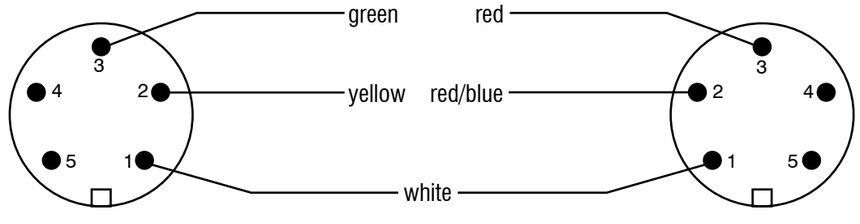

Do not solder screen

Solder the screen to the coupling and fit a wire sleeve on the other side.

PLASTOMETER ELECTRICAL CONNECTION
WITH PRESSURE DISPLAY

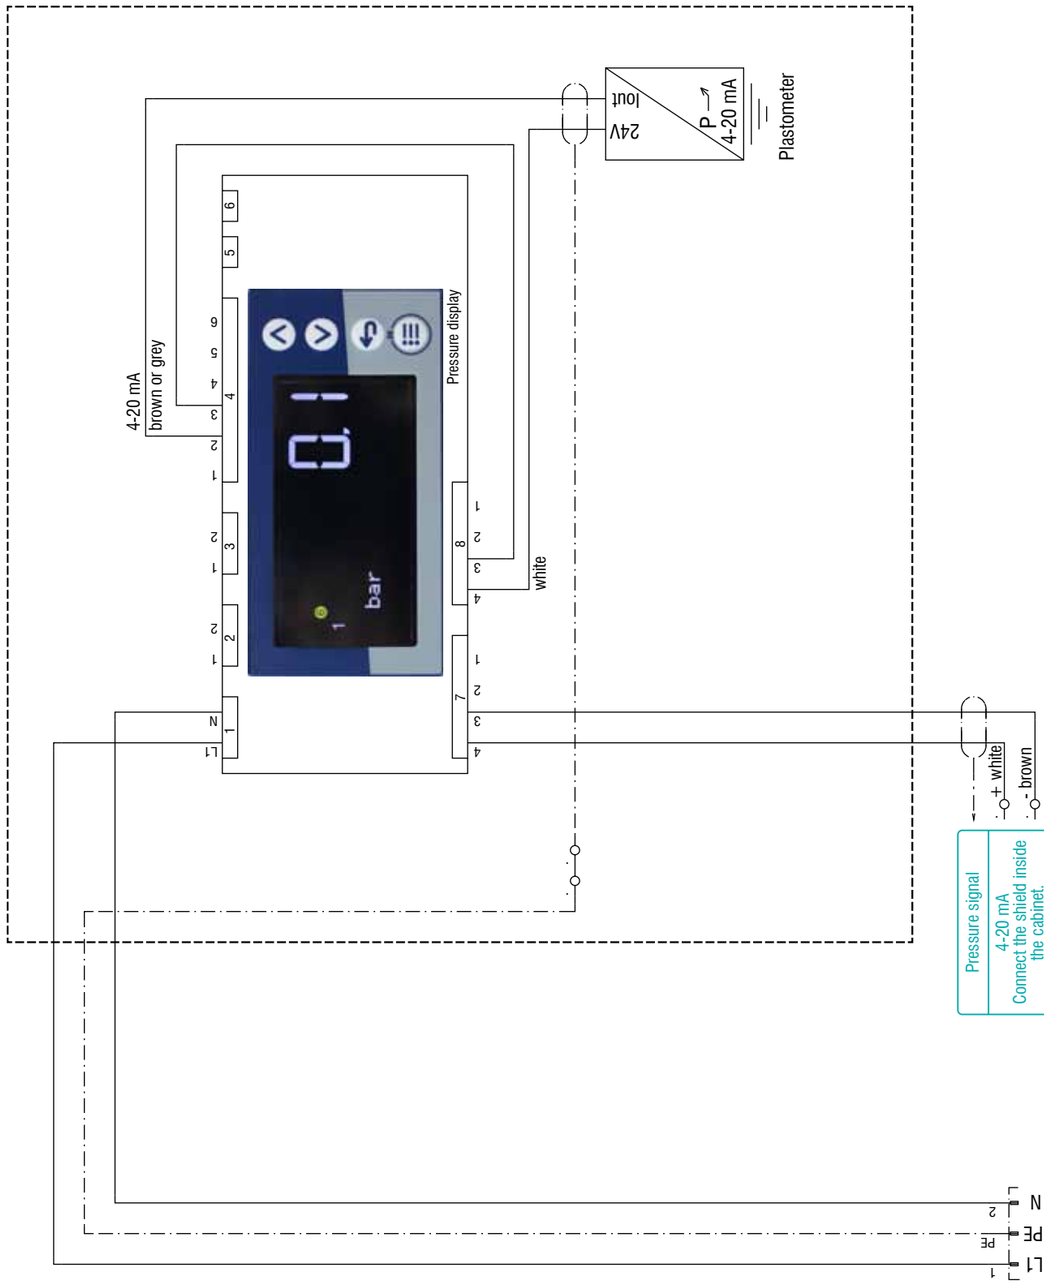

Option: limit comparators

Switching power: 250 V AC/3 A, 24 V DC/2 A

1st limit comparator (e.g. for minimum) Connector terminal block 2



2. limit comparator (e.g. for maximum) Connector terminal block 3



PLASTOMETER ELECTRICAL CONNECTION WITH COMBINED DISPLAY

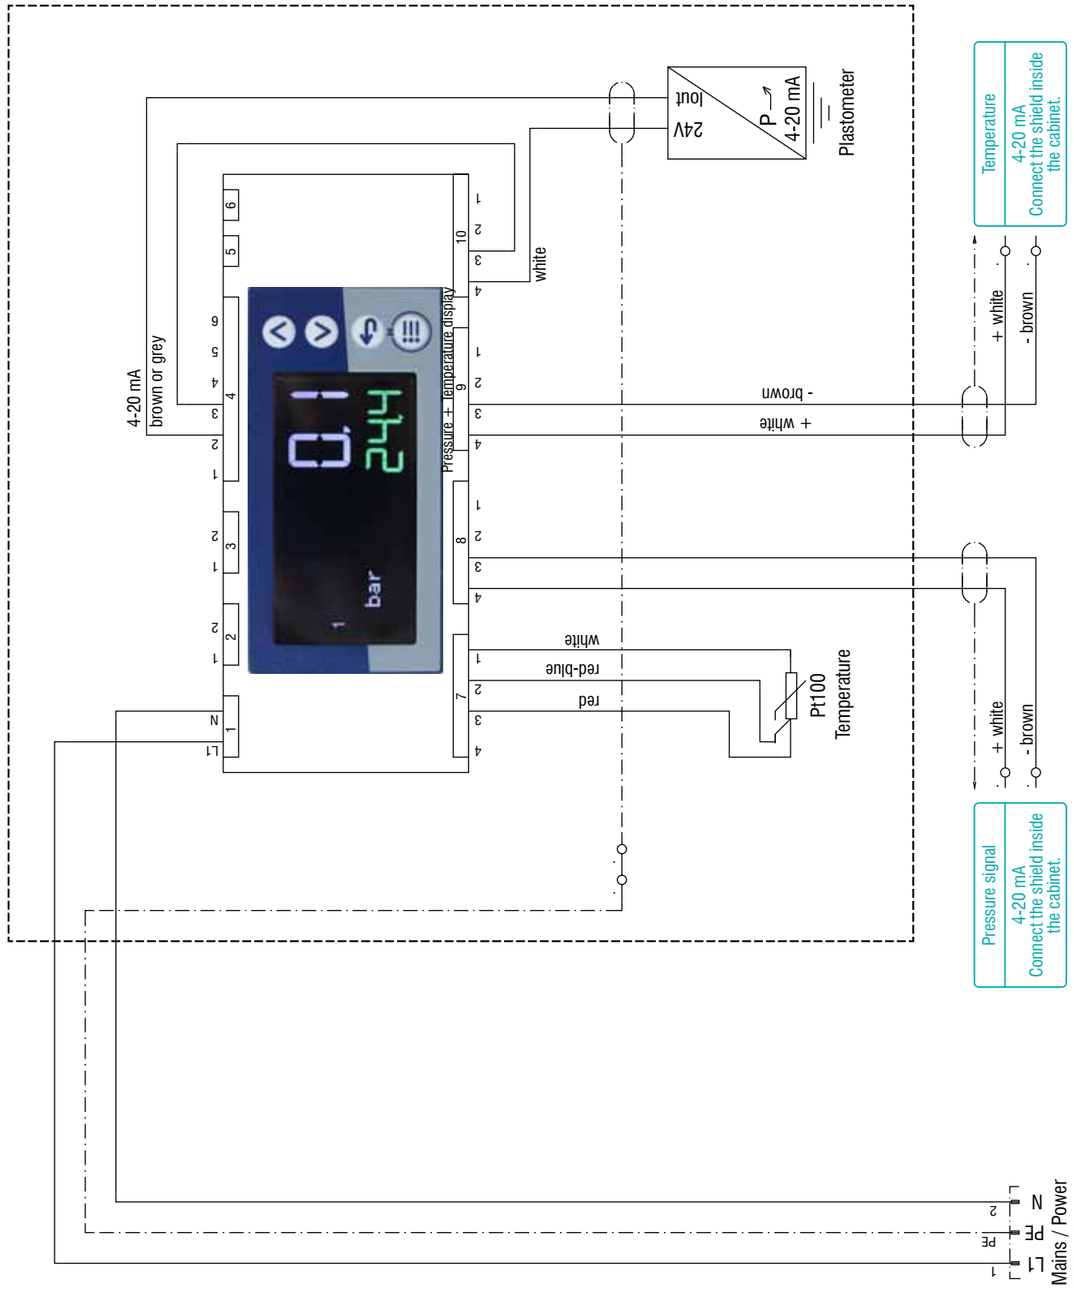

Option: limit comparators

Switching power: 250 V AC/3 A, 24 V DC/2 A

1st limit comparator (e.g. for minimum) Connector terminal block 2



2. limit comparator (e.g. for maximum) Connector terminal block 3

PLASTOMETER ELECTRICAL CONNECTION
WITH PRESSURE AND TEMPERATURE DISPLAY

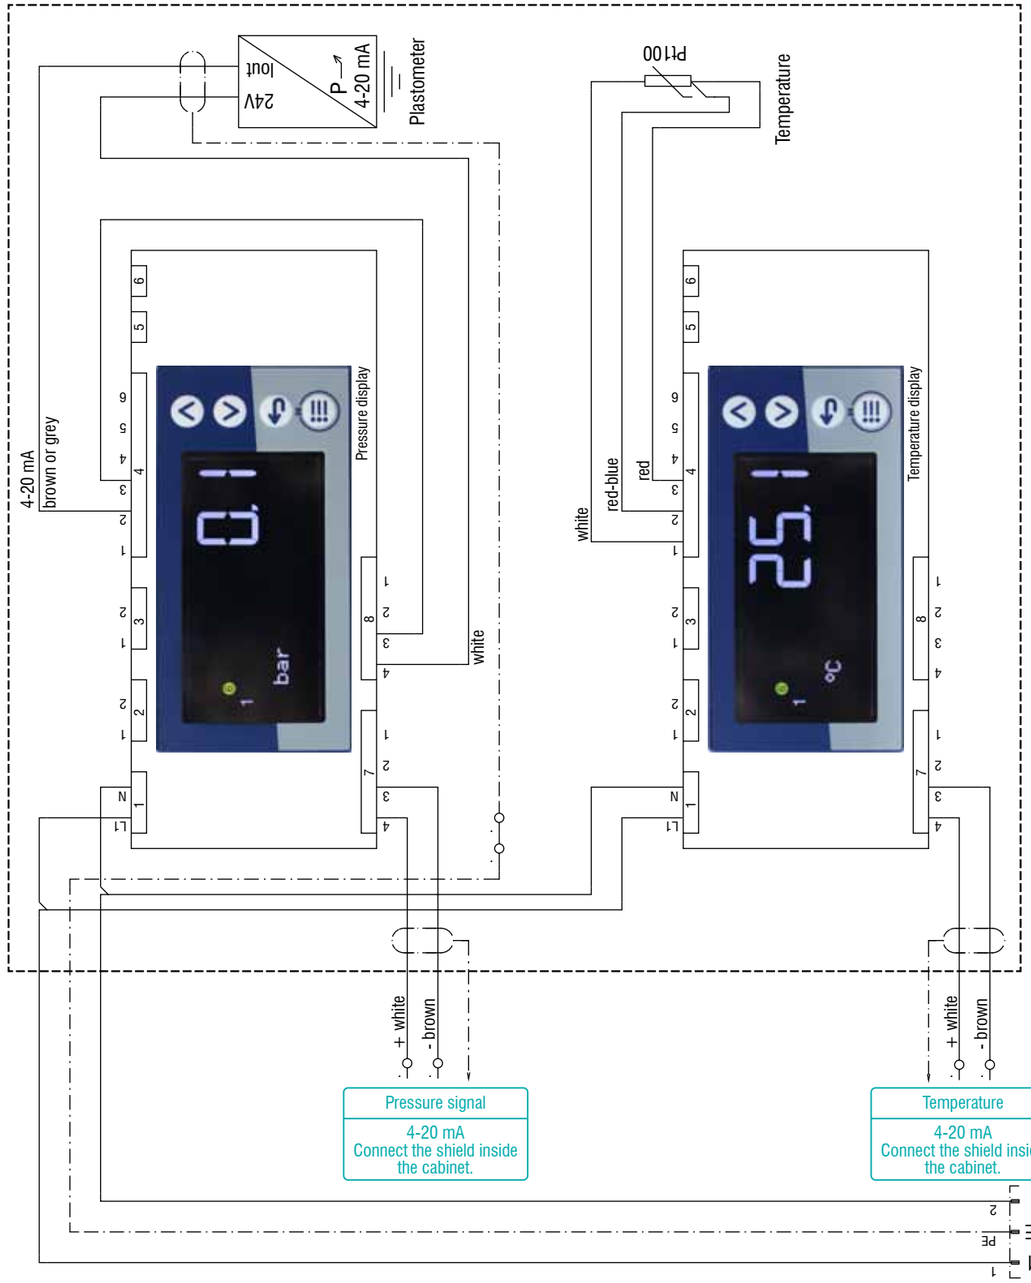

Option: limit comparators

Switching power: 250 V AC/3 A, 24 V DC/2 A

1st limit comparator (e.g. for minimum) Connector terminal block 2



2. limit comparator (e.g. for maximum) Connector terminal block 3



PLASTOMETER ELECTRICAL CONNECTION
WITH 1 EXTERNAL DISPLAY

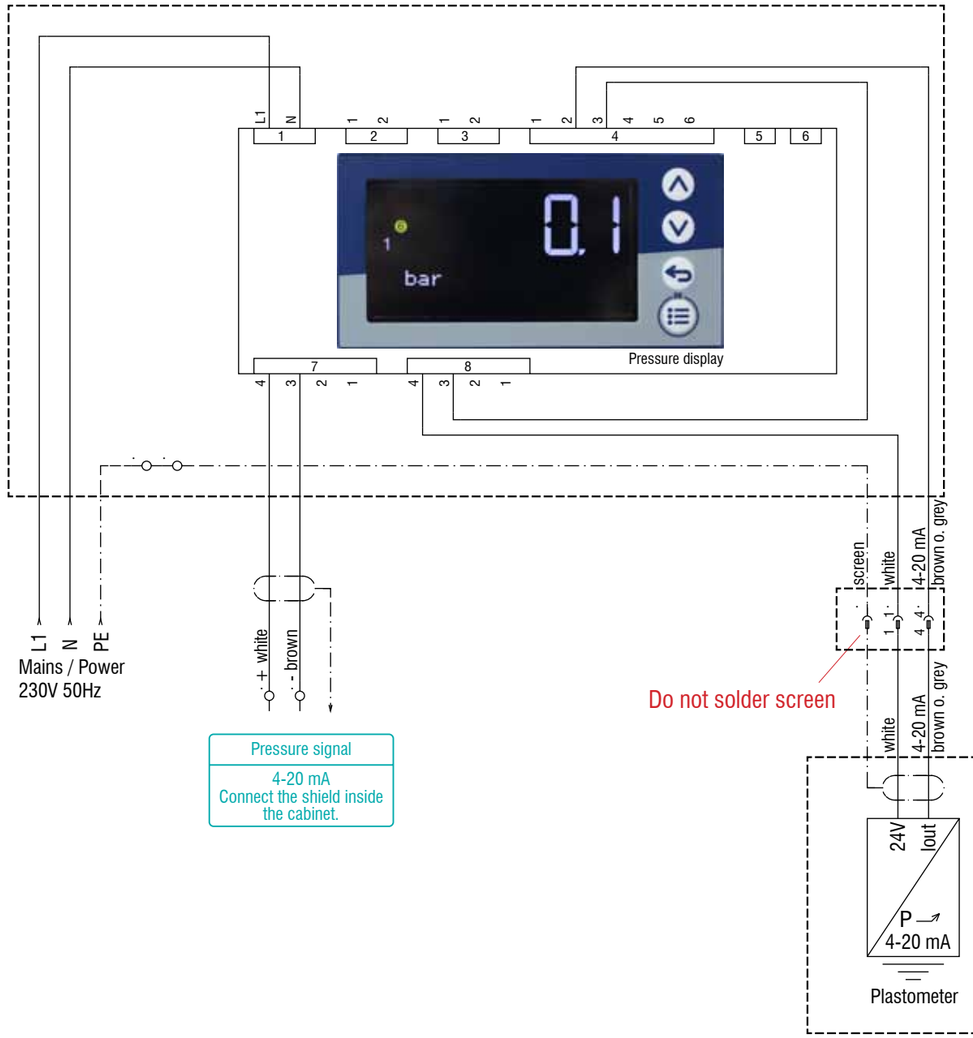

Option: limit comparators

Switching power: 250 V AC/3 A, 24 V DC/2 A

1st limit comparator (e.g. for minimum) Connector terminal block 2



2. limit comparator (e.g. for maximum) Connector terminal block 3



PLASTOMETER ELECTRICAL CONNECTION
WITH 2 EXTERNAL DISPLAYS

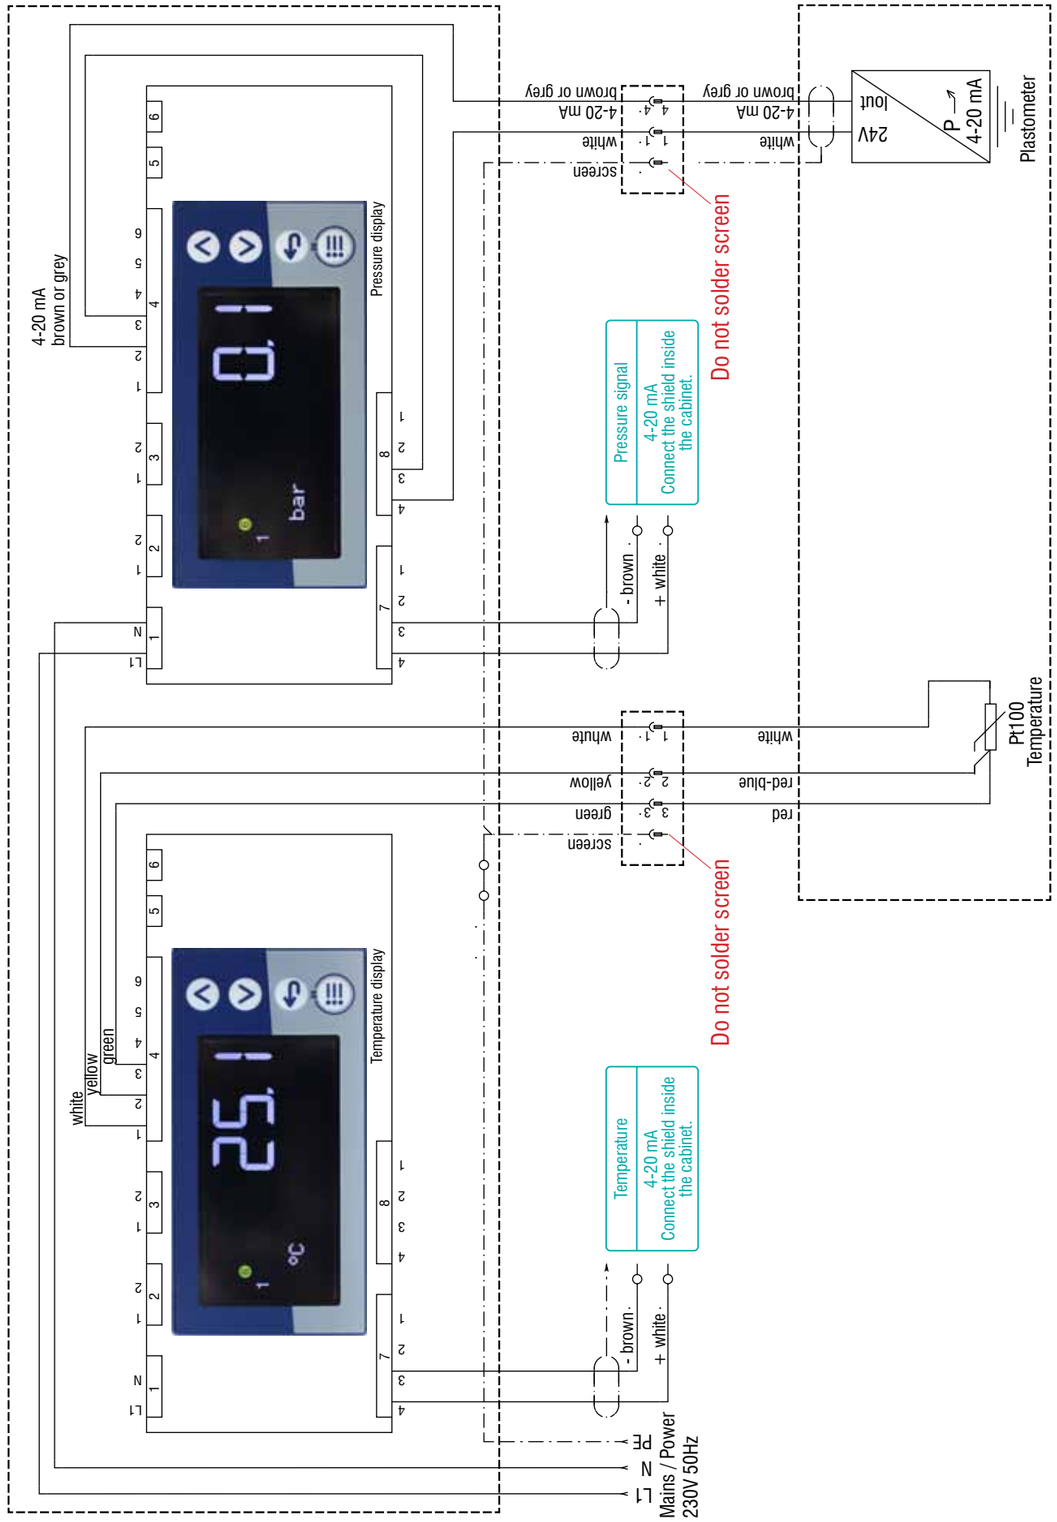

Option: limit comparators

Switching power: 250 V AC/3 A, 24 V DC/2 A

1st limit comparator (e.g. for minimum) Connector terminal block 2

2. limit comparator (e.g. for maximum) Connector terminal block 3

PLASTOMETER MAINTENANCE

REPLACING THE RUBBER PROTECTION

Dismantle the plastometer

Disconnect the connection and remove the plug

Pull the cover off the shaft over the cable

Remove the PT 100 sensor (if available) from the shaft

Unscrew the pressure sensor with a socket wrench

Replacing the rubber protection

Assemble in reverse order

Only screw the pressure sensor hand-tight in the shaft
(There must be no pre-pressure)

There must be no air cushion between the pressure sensor and the rubber protection

SENDING FOR REPAIR

We’re happy to repair any devices that are faulty or have suffered wear in our workshop.

Please send the faulty device with a description of the fault to:

Sensor control
Gesellschaft für Sensorik und Automation mbH

Robert Bosch Strasse 5
56566 Neuwied

Germany

We reserve the right to make technical changes without notice.
Technische Änderungen vorbehalten.
Sous réserve de modifications techniques.

© Sensor Control, 2026
PLASTOMETER_Betriebsanleitung_englisch_06-2026

Robert-Bosch-Straße 5
D-56566 Neuwied

Tel. +49 (0) 26 31 / 96 40 00
Fax. +49 (0) 26 31 / 96 40 40

Internet: www.sensor-control.de
E-Mail: info@sensor-control.de